



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Dittmer

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

Product	Description
<a href="#">eng-8bdi030</a>	Encoder
<a href="#">eng100179</a>	Resistance thermometer with VA
<a href="#">68512915</a>	resistance thermometer
<a href="#">D180608083</a>	RTD temperature probe
<a href="#">1846-MU-50/250 C</a>	resistance thermometer with B head
<a href="#">EngD07/095757</a>	Screw resistance thermometers
<a href="#">PT 100 (Ident-Nr 18802715)</a>	Bearing resistance thermometer
<a href="#">Eng10076626</a>	Clamb-temperatur sensor
<a href="#">1xPT100 EN60751 B (eng60751B/4/150)</a>	Lagerwiderstandsthermometer
<a href="#">1xPT100 EN60751 B (eng60751B/4/250)</a>	Lagerwiderstandsthermometer
<a href="#">1xPT100 EN60751 B (eng60751B/4/1100)</a>	Lagerwiderstandsthermometer
<a href="#">eng3359950</a>	1xPT100-B-2L-3359950
<a href="#">PT100</a>	Temperature sensor
<a href="#">D150201632</a>	Temperature sensor
<a href="#">1xPT100 3</a>	conductor circuit
<a href="#">engD07/04199</a>	Encoder
<a href="#">3044673</a>	RESISTANCE THERMOMETER
<a href="#">1 x PT 100 Ohm DIN B 3-Leiter</a>	Einsteck-Widerstandsthermometer
<a href="#">DI8BDIT013</a>	Encoder
<a href="#">68512015</a>	Tilting pad sensor
<a href="#">D01/117531</a>	Encoder
<a href="#">D130302450</a>	Encoder
<a href="#">eng110604263</a>	resistance thermometer
<a href="#">D07/074260</a>	Immersion resistance thermometer
<a href="#">PT100 (D170201300)</a>	RESISTANCE TEMPERATURE DETECTOR
<a href="#">PT 100 IEC751 KI.B</a>	Temperature Sensor
<a href="#">eng226585</a>	TEMPERATURE SENSOR
<a href="#">eng50826815</a>	Encoder
<a href="#">eng140910585</a>	Screw-in sensor with spring function
<a href="#">eng101005160</a>	Widerstandsthermometer
<a href="#">2 x PT100 DIN KI.A</a>	Temperature Sensor
<a href="#">7.01.64.31</a>	Ex d Fühler BVS 04 ATEX E 138 X
<a href="#">8.03.04.40</a>	Einschraubverschraubung
<a href="#">15002</a>	Encoder
<a href="#">14007</a>	Temperature Sensor
<a href="#">4380331 , type 1xPT100 Ohm DIN KI. B 3-Leiter</a>	Kleinst-Einschraub-Wth (230 Grad)

Product	Description
<a href="#">141112635</a>	screw resistance thermometer
<a href="#">10805153</a>	bearing sensor
<a href="#">10805154</a>	bearing sensor
<a href="#">eng10805148</a>	Lager-Temp.-Fühler
<a href="#">10805150</a>	bed temperature. Sensor/bearing sensor
<a href="#">10805152</a>	bearing sensor
<a href="#">10805155</a>	bearing sensor
<a href="#">140404311</a>	Encoder
<a href="#">D150201452</a>	Encoder
<a href="#">513181900</a>	Special resistance thermometer
<a href="#">eng-98812515 - OEM</a>	Fühler
<a href="#">D160201332</a>	Encoder
<a href="#">2 x PT100</a>	Temperature Sensor
<a href="#">eng170201300</a>	Encoder
<a href="#">045510</a>	Temperature Sensor
<a href="#">D140404318</a>	Encoder
<a href="#">10547867</a>	Encoder
<a href="#">10547797</a>	Encoder
<a href="#">D08/116653</a>	Dual Element RTD
<a href="#">D08/116654</a>	Dual Element RTD
<a href="#">1xPT100 4-Leiter (S/N 161111079)</a>	Einschraub-Widerstandsthermometer
<a href="#">2xPT100DIN A 3-Leiter</a>	Temperature Sensor
<a href="#">160926150001 (BVS 03 ATEX E292 X )</a>	Explosion-Proof Encoder
<a href="#">D140910585</a>	Temperature Sensor
<a href="#">140910585 (2 x PT100 B 2L)</a>	Temperature Sensor
<a href="#">141112707 (2 x PT100 B 2L)</a>	Temperature Sensor
<a href="#">3359950 (1 x PT 100 Ohm DIN B 2-Leiter)</a>	resistance thermometer, RTD
<a href="#">vbn-4,29,04, 32</a>	Widerstandsthermometer
<a href="#">D0403/4558</a>	Lagerfühler
<a href="#">Article No. 4,36,14,11</a>	Widerstandsthermometer
<a href="#">eng14149-01</a>	Bearing temp.-detector
<a href="#">161111079</a>	Einschraub-Widerstandsthermometer
<a href="#">10805148</a>	bearing sensor
<a href="#">eng4.69-1100-2-8</a>	Resistance thermometer
<a href="#">eng4.69-200-2-sg</a>	Resistance thermometer
<a href="#">eng4.69-150-2-sg</a>	Resistance thermometer
<a href="#">D08/074071</a>	Screw
<a href="#">1xPT100 / D10/104068</a>	Probe
<a href="#">100179</a>	Resistance Thermometers
<a href="#">D09/031337</a>	Encoder
<a href="#">68512815 / BVS 03 ATEX E292 X Ex ia</a>	bearing sensor
<a href="#">1721-9</a>	Sheathed thermocouple
<a href="#">68512815 /1XPT100</a>	bearing sensor
<a href="#">120909093</a>	Immersion resistance thermometer
<a href="#">engLV057275- 01</a>	Resistance thermometer

Product	Description
<a href="#">eng101001489</a>	sensor
<a href="#">4.35.04.21</a>	Plug-in Wth 2 meters with fixed cable
<a href="#">4.95.02.22</a>	Screw-in thermowell
<a href="#">D180202279</a>	SENSOR
<a href="#">51.3612700.2B (eng101001489)</a>	resistance sensor
<a href="#">D170100594</a>	sensor
<a href="#">engD04/105751</a>	resistance thermometer
<a href="#">5.045282</a>	TEMPERATURE SENSOR WITH HEAD
<a href="#">68511315</a>	Temperature Probe
<a href="#">68511415</a>	Temperature Probe
<a href="#">eng68510915</a>	tilting pad bearing sensor
<a href="#">eng 226544</a>	Resistance thermometer
<a href="#">8.30.00.38en g</a>	screw
<a href="#">1xFe-CuNi Typ J (D20191001)</a>	Thermocouple
<a href="#">D121212239</a>	Resistance thermometer
<a href="#">BVS 04 ATEX E 138 X (7.33.06.10)</a>	sensor
<a href="#">Modell 4.69.01. 05</a>	Special resistance thermometer
<a href="#">eng-1846-17</a>	Encoder
<a href="#">1846-17 (BVS 03 ATEX E292 X)</a>	resistance thermometer
<a href="#">170504108</a>	Temperature sensor
<a href="#">191015078</a>	Immersion resistance thermometer without screw connection
<a href="#">10805151</a>	bearing sensor
<a href="#">68512115</a>	tilting pad bearing sensor
<a href="#">211040</a>	Resistance thermometer
<a href="#">ENG15896516</a>	Bearing Sensor
<a href="#">D09/083748</a>	Resistance Thermometer
<a href="#">eng9228653</a>	Encoder
<a href="#">im0001724</a>	probe
<a href="#">D200509351</a>	Encoder
<a href="#">in-4.52.20.1 2 (2xPT100)</a>	Resistance thermometer with VAconnection head
<a href="#">8.30.00.16</a>	Movable screw-in screw connection for temperature sensors
<a href="#">3359950</a>	Temperature Sensor
<a href="#">4.44.25.11</a>	Resistance thermometer
<a href="#">4.44.25.03</a>	Resistance thermometer version
<a href="#">engdi8bdi00 6</a>	Special resistance thermometer
<a href="#">68513015</a>	RESISTANCE THERMOMETER
<a href="#">D04/116108</a>	Screw resistance thermometer
<a href="#">Art.-Nr. 4.18.04.31 Type PT100</a>	feeler
<a href="#">eng68512815</a>	Encoder
<a href="#">11313671- k-a</a>	
<a href="#">9020001</a>	Sensor
<a href="#">eng-z1383595</a>	Resistance thermometers
<a href="#">eng150504539</a>	Resistance thermometers
<a href="#">68511715</a>	tilting pad bearing sensor
<a href="#">68511515</a>	RESISTANCE TEMPERATURE SENSOR

Product	Description
<a href="#">79321815</a>	SENSOR TEMPERATURE
<a href="#">68512715</a>	SENSOR TEMPERATURE
<a href="#">4.15.04.11</a>	Screw-in resistance thermometer
<a href="#">4.15.20.11</a>	Screw-in resistance thermometer
<a href="#">eng-1846-8</a>	Resistance thermometer with B head
<a href="#">D500589</a>	Screw resistive thermometer
<a href="#">4.52.01.11</a>	Resistance thermometers
<a href="#">4.53.04.41</a>	Resistance thermometers
<a href="#">5-68450-BB0702A-14</a>	sensor
<a href="#">en68450bb1681a01</a>	Insert-in
<a href="#">eng684509103501</a>	Resistance thermometers
<a href="#">5-68450-BB0702A-14 (as AU169721080005)</a>	Encoder
<a href="#">E0700090</a>	Sheath resistance thermometer
<a href="#">werkszeu30</a>	temperature sensor
<a href="#">en68450bb0702a14 AU161234680005</a>	sensor
<a href="#">10122-1</a>	Encoder
<a href="#">10122-2</a>	Encoder
<a href="#">1xPT100</a>	TEMPERATURE SENSOR
<a href="#">SN 2.64.04.42</a>	Sheath Thermocouple
<a href="#">eng10547866 KZ 4651600-00140-xx</a>	bearing-temp.-sensor
<a href="#">eng10547951 KZ D1211160802</a>	Bearing sensor
<a href="#">eng10547950 KZ D1307405602</a>	Bearing sensor
<a href="#">eng10547951 KZ D1307405603</a>	Bearing sensor
<a href="#">eng10547794 KZ D1308454302</a>	bearing-temp.sensor
<a href="#">eng10547866 KZ D1308454303</a>	bearing-temp.-sensor
<a href="#">eng10547868 KZ D1308454304</a>	Bearing-Temperature-Sensor
<a href="#">eng10547950 KZ D1309484301</a>	Bearing sensor
<a href="#">eng10547794 KZ 4653437-00020-xx</a>	bearing-temp.sensor
<a href="#">eng10547866 KZ 4653437-00030-xx</a>	bearing-temp.-sensor
<a href="#">eng10547868 KZ 4651600-00180-xx</a>	Bearing-Temperature-Sensor
<a href="#">eng10547868 KZ 4653437-00080-xx</a>	Bearing-Temperature-Sensor
<a href="#">eng10547794 KZ 46553437-00020-xx</a>	Encoder
<a href="#">eng10547794 KZ 46553437-000100-xx</a>	Encoder
<a href="#">eng10547868 KZ 46553437-00080-xx</a>	Encoder
<a href="#">98812515</a>	Resistance thermometers
<a href="#">eng-45112</a>	Resistance thermometers
<a href="#">LV57275-01</a>	Encoder
<a href="#">eng-10122-2</a>	Encoder
<a href="#">eng-10122-1</a>	Special Thermocouple
<a href="#">eng18801315</a>	Special resistance thermometers
<a href="#">eng18802615</a>	Bearing Resistance Thermometer NoEx
<a href="#">eng27521015</a>	Bearing resistance thermometer
<a href="#">im6970453707</a>	Encoder
<a href="#">en68450bb0945a00</a>	Plug-in Double Thermocouple
<a href="#">im68450bb0945axx</a>	Plug-in Double Thermocouple

Product	Description
<a href="#">94/1113479</a>	Room temperature sensor
<a href="#">eng101018149</a>	Resistance thermometers
<a href="#">en68450bb070 2a41</a>	Plug-in double thermocouple with measuring insert
<a href="#">D170100511</a>	Plug-in double thermocouple with measuring insert
<a href="#">P/N: eng310108, Type: 310108</a>	Screw WTH
<a href="#">131010068</a>	Encoder
<a href="#">190101159</a>	Screw resistive thermometer
<a href="#">eng10547866</a>	Bearing warm. probe
<a href="#">1XPT100-B-3L , P/N: D191013360</a>	Immersion resistant thermometer
<a href="#">D2104052220</a>	resistance thermometer
<a href="#">D131049630001</a>	Encoder
<a href="#">1xPT100 3L 1/3 DIN</a>	Temperature Sensor
<a href="#">Manufacture Certificate</a>	Certification Document
<a href="#">D200813511</a>	Immersion resistant thermometer
<a href="#">D160807119</a>	resistance thermometer
<a href="#">21003950</a>	temperature sensor
<a href="#">D20210901</a>	resistance thermometer
<a href="#">68511615</a>	Encoder
<a href="#">D02/062556</a>	Screw-in wth for gases tip perforated
<a href="#">Factory certificate 3.1B</a>	Manufacture Certificate 3.1B (Test Report)
<a href="#">4.29.04.42 Typ 206 d</a>	resistance thermometer
<a href="#">Manufacture Certificate 3.1B</a>	Certificate
<a href="#">E6A1E1A1776483-EAC</a>	Sensor
<a href="#">eng-p0008860 600</a>	Bayonet screw connection with nipple M14x1 SW17
<a href="#">eng-10122-2 (PM0A67F14A26)</a>	special thermocouple
<a href="#">eng-10122-1 (PM0A67F14A26)</a>	special thermocouple
<a href="#">eng-10122-2 (PM0A67F14A18)</a>	special thermocouple
<a href="#">eng-10122-1 (PM0A67F14A18)</a>	special thermocouple
<a href="#">eng21003950</a>	temperature sensor
<a href="#">eng2021-09-0 1</a>	Resistance thermometer
<a href="#">D150606022</a>	Sensor
<a href="#">BVS 03 ATEX E292 X</a>	Immersion thermocouple head B
<a href="#">D150606698</a>	Resistance thermometer with VA connection head Ø 40 mm
<a href="#">ATEX certificate</a>	ATEX certificate
<a href="#">eng1211098</a>	Encoder
<a href="#">4.91.00.72</a>	Resistance thermometer
<a href="#">kali2xPT100/ 3pun</a>	Single test certificate
<a href="#">eng161009092</a>	Screw-in resistance thermometer with neck tube 115 mm
<a href="#">1xPT100 DIN Kl.B 4-wire</a>	Bearing sensor
<a href="#">eng20220202</a>	Encoder
<a href="#">D181014298</a>	thermocouple
<a href="#">160302740</a>	resistance thermometer
<a href="#">140302908</a>	resistance thermometer
<a href="#">210100219 / 1xPT100</a>	Bearing temp. -detector
<a href="#">test report 3.1</a>	Manufacture Certificate

Product	Description
<a href="#">au1705489500 01</a>	Encoder
<a href="#">en68450bb165 9a50</a>	resistance thermometer
<a href="#">eng101015374</a>	bearing resistance thermometer
<a href="#">eng101015373</a>	sensor
<a href="#">eng24222815</a>	bearing resistance thermometer
<a href="#">1XNiCr-Ni</a>	Probe
<a href="#">1211141-G L</a>	Temperature Sensor
<a href="#">210405450</a>	resistance thermometer
<a href="#">11000602 Type: 1xPt100/3L DIN-B</a>	Temperature Sensor
<a href="#">Type: 1xPT100-B-3L-11000602</a>	Temperature Sensor
<a href="#">OEM 110807269</a>	resistance thermometer
<a href="#">140708117</a>	Tilt segment bearing sensor
<a href="#">68511915</a>	Storage resistance thermometer
<a href="#">eng8bdi031</a>	Immersion resistance thermometer
<a href="#">D120707394</a>	Screw-in sensor with spring function.
<a href="#">D1123534801</a>	Screw-in WTH
<a href="#">8.01.04.40</a>	Compression fitting
<a href="#">101017366</a>	Encoder
<a href="#">101015948</a>	Encoder
<a href="#">101015069</a>	Encoder
<a href="#">101003347</a>	Tilting pad sensor
<a href="#">Manufacture Certificate 3.1</a>	Manufacture Certificate
<a href="#">eng-11473</a>	probes
<a href="#">WTH Exi G/D T3 WZ</a>	Explosion-Proof Temperature Sensor
<a href="#">1 x PT100 -B-3L--1268658</a>	screw-in
<a href="#">226704</a>	Tilting pad sensor
<a href="#">002815</a>	Immersion resistance thermometer with adjustable screw connection
<a href="#">156081</a>	Screw-in resistance thermometer
<a href="#">hydro 03-03</a>	Flow Sensor
<a href="#">101001426</a>	Encoder
<a href="#">150605961</a>	Resistance thermometer with MA
<a href="#">1xPT100 DIN class B, 2-wire</a>	Temperature sensor eng-005
<a href="#">D160605262</a>	resistance thermometer
<a href="#">D160201610</a>	Encoder
<a href="#">D130706826</a>	Screw-in resistance thermometer with spring-function
<a href="#">eng101018445 / model: 4.69.20.06</a>	resistance thermometer
<a href="#">2 x PT100 EN60751 B 3-L</a>	Sensor
<a href="#">1 x PT 100 Ohm DIN KI.B 2 - 3359950</a>	resistance thermometer
<a href="#">68450bb232 7a01</a>	Encoder
<a href="#">Model 4.68.00.02</a>	Encoder
<a href="#">eng29011.03</a>	Encoder
<a href="#">8.11.04.50</a>	Encoder
<a href="#">2.35.40.42</a>	Encoder
<a href="#">147591</a>	Encoder

Product	Description
<a href="#">eng147591</a>	Encoder
<a href="#">D221116301</a>	Screw-in resistance thermometer
<a href="#">D201119693</a>	resistance thermometer
<a href="#">en21079686</a>	Encoder
<a href="#">D160100327</a>	TEMPERATURE TRANSMITTER
<a href="#">D16102874000 1</a>	resistance thermometer
<a href="#">4.99.04.31</a>	resistance thermometer
<a href="#">38472</a>	Screw-in resistance thermometer
<a href="#">eng-hydro03- 03</a>	Flow Sensor
<a href="#">Model 4.69.01.05</a>	Special resistance thermometer
<a href="#">D1704472702</a>	Screw-in WTH
<a href="#">D1115465802</a>	Screw-in WTH by workshop number
<a href="#">1xPT100 4-wire</a>	Screw-in resistance thermometer
<a href="#">en68450bb255 8a22</a>	resistance thermometer
<a href="#">eng1100-4,8- 12</a>	Encoder
<a href="#">eng1100-4,8- 12 12060 mm</a>	Encoder
<a href="#">226562</a>	Encoder
<a href="#">eng230100832</a>	Screw-in resistance thermometer
<a href="#">engEL002815</a>	Immersion resistance thermometer with sliding screw connection
<a href="#">1846-8</a>	temperature sensor
<a href="#">TE 2061A</a>	Resistance thermometer for Siemens tipping shaft bearings
<a href="#">TE 2061B</a>	Resistance thermometer for Siemens tipping shaft bearings
<a href="#">eng-156081</a>	Encoder
<a href="#">eng101011660</a>	Encoder
<a href="#">eng101008493</a>	Encoder
<a href="#">eng101013697</a>	Encoder
<a href="#">1xPT100 Ohm DIN Kl.B 2-wire circuit</a>	Screw-in resistance thermometer
<a href="#">eng000769363 34</a>	Encoder
<a href="#">PT 100 Ohm DIN Kl.B 3</a>	Screw-in resistance thermometer
<a href="#">eng145082</a>	Screw-in resistance thermometer
<a href="#">eng14149-02</a>	Instrument systems
<a href="#">1 x PT 100 / engD08/042488</a>	Temperature Sensor
<a href="#">D201072720002</a>	Temperature sensor
<a href="#">101003037</a>	Encoder
<a href="#">101003038</a>	Encoder
<a href="#">D01/010688</a>	Encoder
<a href="#">1XPT100-B-4L-VENTAP6</a>	Temperature Sensor
<a href="#">1XPT100-B-3L - 045510</a>	resistance thermometer
<a href="#">1 x PT100 DIN B 3-wire circuit</a>	special resistance sensor
<a href="#">eng1211014654</a>	Encoder
<a href="#">D20713252</a>	resistance thermometer
<a href="#">eng4.48.13.2 50.6 / 1 x PT100 EN 60751 B 3-wire</a>	feeler
<a href="#">4.95.04.32</a>	
<a href="#">8bdi031</a>	Sensor

Product	Description
<a href="#">EC Declaration of conformity for the sensors</a> <a href="#">79321815</a>	
<a href="#">eng101012271</a>	
<a href="#">eng101012272</a>	
<a href="#">eng101012585</a>	
<a href="#">eng101012586</a>	
<a href="#">eng101012587</a>	
<a href="#">eng101003347</a>	
<a href="#">eng79219915</a>	
<a href="#">Manufacture Certificate 3.1 (Test Report)</a>	
<a href="#">eng9020001</a> <a href="#">115771</a>	Screw-in resistance thermometer
<a href="#">eng1268658</a>	
<a href="#">66287590</a>	temperature sensor
<a href="#">66287690</a>	temperature sensor
<a href="#">87129315</a>	sensor