


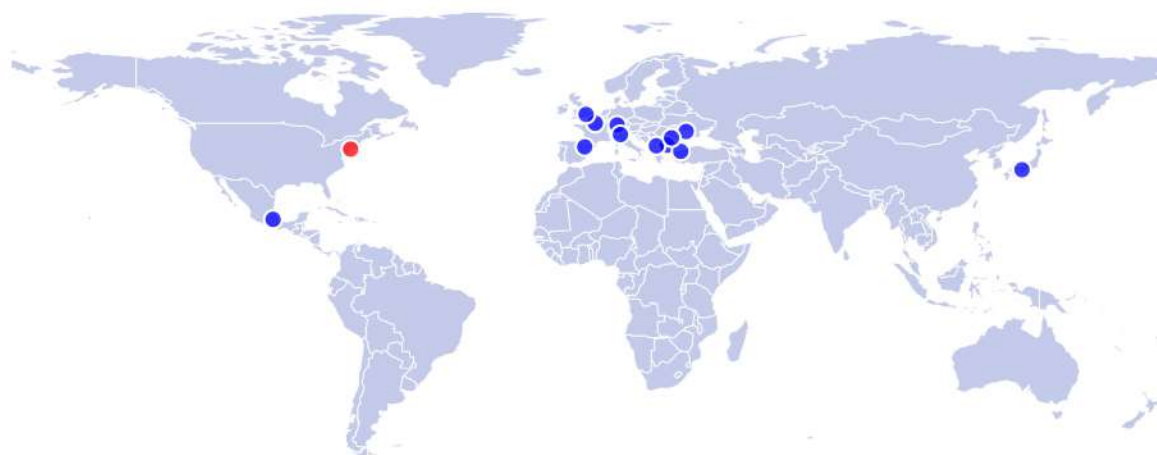

# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Bd Sensors

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### BRAND'S PRODUCTS

| Product                                                                 | Description                      |
|-------------------------------------------------------------------------|----------------------------------|
| <a href="#">P/N: 110-4000-1-5-100-100-1-000, Type: DMP 331</a>          | Pressure transmitters            |
| <a href="#">26.600 G-1002-R-1-5-100-200-1-000</a>                       | Pressure transmitter             |
| <a href="#">26.600 G-1002-R-4-5-100-300-1-000</a>                       | OEM pressure transmitter 26600 G |
| <a href="#">730-D-2501-1-5-100-200-1-000</a>                            | DMD 331 Druckmessumformer        |
| <a href="#">110-2500-E-5-100-F00-1-000</a>                              | Druckmessumformer DMP 331        |
| <a href="#">DMP 331 Code: 110-D733-1-5-100-F00-1-000</a>                | Pressure transmitter             |
| <a href="#">110-M400-3-5-M00-F00 - 1-000</a>                            | Pressure Transmitter DMP 331     |
| <a href="#">110-4002-E-3-100-C00-1-006 / DMP 331</a>                    | Pressure Transmitter             |
| <a href="#">DMP 331 Code: 110-4000-3-3-M00-300-1-000</a>                | pressure transmitter             |
| <a href="#">DMP 331 Code: 110-6001-3-3-M00-300-1-000</a>                | Druckmessumformer                |
| <a href="#">DMP 331 Code: 110-M400-3-5-M00-300-1-000</a>                | Druckmessumformer                |
| <a href="#">DMP 333 CODE: 130-1003-1-2-100-800-5-000</a>                | pressure transmitter             |
| <a href="#">DMP 331 110-4000-3-3-M10-300-1-000</a>                      | pressure transmitter             |
| <a href="#">600-2502-1-3-G10-100-1-000</a>                              | Pressure Transmitters            |
| <a href="#">68-D049-K-1-2-1-1-4-2-006-000</a>                           | Tauchsonde LMK 458               |
| <a href="#">PA 430</a>                                                  | sensor                           |
| <a href="#">DMP-331 110-1600-1-5-100-100-1-000</a>                      | PRESSURE TX sensor               |
| <a href="#">DMP 331 Code (aktualisiert): 111-1002-4-3-100-700-1-000</a> | Druckmessumformer                |
| <a href="#">DMP343 100-S250-E-3-M10-300-1-000</a>                       | PRESSURE TRANSMITTER             |
| <a href="#">LMP 308i</a>                                                | Tauchsonde                       |
| <a href="#">DMP 343 100-S050-3-5-100-300-1-000</a>                      | Druckmessumformer                |
| <a href="#">130-2503-3-3-100-100-5-000</a>                              | Druckmessumformer DMP 333        |
| <a href="#">DS 200.</a>                                                 | Druckmessumformer                |
| <a href="#">PAC-99X - PS32 / USB / UI4 / UI4 / UI4 - 005 - N1</a>       | Multichannel Process Display     |
| <a href="#">PAC-141X - PS32 / USB / UI4 / UI4 / UI4 - 005 - N1</a>      | Multichannel Process Display     |
| <a href="#">PAC-99X - PS32 / USB / E / E / UI4 - 005 - N1</a>           | Multichannel Process Display     |
| <a href="#">PAC-141X - PS32 / USB / E / E / UI4 - 005 - N1</a>          | Multichannel Process Display     |
| <a href="#">LMK 351</a>                                                 | Einschraubsonde                  |
| <a href="#">DMK 351P / Code: 295-D204-1-3-E00-C63-1-1-2-000</a>         | Pressure transmitter             |
| <a href="#">100-S050-E-5-M10-300-1-000</a>                              | Druckmessumformer DMP 343 Ex     |
| <a href="#">26.600 G-1602-R-1-5-100-300-1-070</a>                       | OEM-Druckmessumformer 26.600G    |
| <a href="#">LMP 308</a>                                                 | Tauchsonde                       |
| <a href="#">26.600G-1003-R-1-5-100-R40-1-000</a>                        | OEM-Druckmessumformer            |
| <a href="#">100-S250-E-5-M10-300-1-000</a>                              | Druckmessumformer                |

| Product                                                            | Description                              |
|--------------------------------------------------------------------|------------------------------------------|
| <a href="#">LMK 351 Code: 470-Z030-1-3-100-M00-1-1-2-000</a>       | Screw-in probe                           |
| <a href="#">26.600G-6001-R-3-5-C10-N40-1-000</a>                   | OEM Druckmessumformer                    |
| <a href="#">787-4003-1-2-5-N01-Z00-1-5-1-000</a>                   | Elektronischer Druckschalter DS 201P     |
| <a href="#">26.600-G-6001-R -1-5-100-300-1-000</a>                 | Druckmessumformer                        |
| <a href="#">LMK 351</a>                                            | Einschraubsonde LMK 351                  |
| <a href="#">DMP 457 Code: 600-2500-E-5-G10-400-1-000</a>           | Druckmessumformer DMP 457                |
| <a href="#">DMP 457 Code: 600-6003-E-3-G10-N40-5-070</a>           | Druckmessumformer DMP 457                |
| <a href="#">DMP 457 Code: 600-6003-E-3-G10-400-5-000</a>           | Druckmessumformer DMP 457                |
| <a href="#">DMP 334 Code: 140-1004-E-3-100-V00-2-000</a>           | Druckmessumformer DMP 334                |
| <a href="#">DMP 457 Code: 600-6003-1-3-G10-N00-1-070</a>           | Druckmessumformer DMP 457                |
| <a href="#">600-2500-E-5-G10-400-1-000</a>                         | Druckmessumformer DMP 457                |
| <a href="#">600-6003-E-3-G10-N40-5-070</a>                         | Druckmessumformer DMP 457                |
| <a href="#">600-6003-E-3-G10-400-5-000</a>                         | Druckmessumformer DMP 457                |
| <a href="#">140-1004-E-3-100-V00-2-000</a>                         | Druckmessumformer DMP 334                |
| <a href="#">600-6003-1-3-G10-N00-1-070</a>                         | Druckmessumformer DMP 457                |
| <a href="#">591-D581-1-B5-TR3-H00-1-1-2-000</a>                    | Druckmessumformer DMK 457                |
| <a href="#">11C-6002-7-1-100-N00-3-000</a>                         | Druckmessumformer DMP 320                |
| <a href="#">780-X102-E-1-3-N01-300-1-000</a>                       | Elektronischer Druckschalter DS 200      |
| <a href="#">M0E-1601-0-B5-0K0-200-1-1-1-1-000</a>                  | Digitalmanometer BAROLI 02               |
| <a href="#">M0E-4000-0-B5-0K0-200-1-1-1-1-000</a>                  | Digitalmanometer BAROLI 02               |
| <a href="#">600-1602-E-3-G10-300-1-000</a>                         | Druckmessumformer DMP 457                |
| <a href="#">M0G-2501-0-B2-0K0-C62-0-1-1-2-000</a>                  | Digitalmanometer Baroli 02P              |
| <a href="#">110-1002-1-3-100-300-1-000</a>                         | DMP 331 pressure transmitter             |
| <a href="#">785-LS02-1-1-2-200- C62-1-0-2-000</a>                  | Elektronischer Druckschalter DS 200P     |
| <a href="#">110-6002-3-3-100-100-5-000</a>                         | Druckmessumformer DMP 331                |
| <a href="#">110-1002-1-2-100-800-1-000</a>                         | Druckmessumformer DMP 331                |
| <a href="#">110-2502-1-2-100-800-1-000</a>                         | Druckmessumformer DMP 331                |
| <a href="#">130-1003-1-2-100-800-5-000</a>                         | Druckmessumformer DMP 333                |
| <a href="#">130-1603-1-2-100-800-5-000</a>                         | Druckmessumformer DMP 333                |
| <a href="#">130-2503-1-2-100-800-5-000</a>                         | Druckmessumformer DMP 333                |
| <a href="#">130-6003-1-2-100-800-5-000</a>                         | Druckmessumformer DMP 333                |
| <a href="#">DMP-331-110-6001-3-5-1-3-1-000</a>                     | Druckmessumformer DMP 331                |
| <a href="#">110-M100-3-5-M00-F00 - 1-000</a>                       | Pressure Transmitter DMP 331             |
| <a href="#">110-M160-3-5-M00-300 - 1-000</a>                       | Pressure Transmitter DMP 331             |
| <a href="#">430-V152-1-1-3-1-100-3-000</a>                         | Pressure Transmitter LMP 331             |
| <a href="#">110-V152-3-3-100-300-1-000</a>                         | TRANSMITTER,PRESS -1TO+1.5BAR 0-10V/3-WI |
| <a href="#">250-4000-1-5-100-H00-1-B-2-000</a>                     | Druckmessumformer DMK 331                |
| <a href="#">250-4001-1-5-100-H00-1-B-2-000</a>                     | Pressure transmitter                     |
| <a href="#">DMP331P 500-1000-T2-2-TR1-M95-1-0-1-000</a>            | pressure transmitter                     |
| <a href="#">Type LMK 331 / Code 460-D172-1-5-TA0-K00-7-B-2-000</a> | LMK 331 screw-in probe                   |
| <a href="#">130-1003-2-3-M00-D15-5-520</a>                         | DMP 333 pressure transmitter             |
| <a href="#">RKT 4-07S +2M KAB</a>                                  | Kabeldose Lumberg RKT-4-07S              |
| <a href="#">LMK 351 Code: 470-1001-1-3-TA0-M00-1-1-2-000</a>       | Einschraubsonde                          |

| Product                                                                | Description                                    |
|------------------------------------------------------------------------|------------------------------------------------|
| <a href="#">785-1002-1-1-5-TA0-D04-1-1-1-200</a>                       | Elektronischer Druckschalter DS 200P           |
| <a href="#">110-1302-1-2-100-400-1-000</a>                             | Druckmessumformer DMP 331                      |
| <a href="#">250-1302-1-5-100-H00-1-B-2-000</a>                         | Druckmessumformer DMK 331                      |
| <a href="#">Code: 17.600 G-1002-R-1-5-100-300-P-000</a>                | OEM Druckmessumformer 17.600G                  |
| <a href="#">17.600G-1002-R-1-5-100- N40-2-000 - OEM for Bd Sensors</a> | Druckmessumformer 17.600G                      |
| <a href="#">17.600G-4002-R-1-5-100- N40-2-000</a>                      | 17,600 G pressure transmitter                  |
| <a href="#">18.601G-6000-R-1-5-100-N40-1-000</a>                       | Druckmessumformer 18.601G                      |
| <a href="#">18.601G-4001-R-1-5-100-N40-1-000 - OEM for Bd Sensors</a>  | Druckmessumformer 18.601G                      |
| <a href="#">78H-4000-0-2-3-N01-N00-1-000</a>                           | Druckschalter DS 200                           |
| <a href="#">782-2502-E-1-5-N01-N00-3-1-2-000</a>                       | Druckschalter DS 201                           |
| <a href="#">Nr. 110-M400-3-3-M10-F00-1-000, Typ DMP 331</a>            | Pressure transmitter                           |
| <a href="#">110-2000-1-5-TR0-H00-1-000</a>                             | Druckmessumformer                              |
| <a href="#">46.606-6001-2-TR0-000</a>                                  | Pressure Transmitter                           |
| <a href="#">46.606-1002-2-TR0-000</a>                                  | Pressure Transmitter                           |
| <a href="#">46.606-1602-2-TR0-000</a>                                  | Pressure Transmitter                           |
| <a href="#">46.606-2502-2-TR0-000</a>                                  | Pressure Transmitter                           |
| <a href="#">46.606-4002-2-TR0-000</a>                                  | Pressure Transmitter                           |
| <a href="#">LMK 458 768-D049-K-1-2-1-3-4-2-025-000</a>                 | Tauchsonde                                     |
| <a href="#">LMK458-768-D290-K-1-2-1-3-4-2-025-000</a>                  | Tauchsonde                                     |
| <a href="#">DMP 331 Code - 110-1001-E-3-850-100-1-000</a>              | Industrial Pressure Transmitter                |
| <a href="#">18.601G-1601-R-1-5-100-300-3-000</a>                       | Pressure Transmitter                           |
| <a href="#">18.605G-4000-M-1-5-1-006-300-1-000</a>                     | Tauchfähiger OEM Transmitter 18.605 G          |
| <a href="#">850-1-1-100-1-N-000</a>                                    | Plug-on Display for Current Loop with Contacts |
| <a href="#">110-M400-3-3-M00-F00-1-000</a>                             | DMP 331 pressure transmitter                   |
| <a href="#">DMP 457</a>                                                | Druckmessumformer                              |
| <a href="#">590-V602-E-5-TR3-100-1-1-2-000</a>                         | Pressure Transmitter                           |
| <a href="#">591-1002-E-5-TR3-100-1-1-2-000</a>                         | Pressure Transmitter                           |
| <a href="#">210-1503-1-5-100-N40-2-008</a>                             | Pressure Transmitter                           |
| <a href="#">Code: 500-2501-1-3-100-C61-1-0-2-000</a>                   | Pressure Transmitter                           |
| <a href="#">Code: 17.600G-4002-R-1-5-100-300-P-000</a>                 | Pressure transmitter                           |
| <a href="#">18.601G-1000-R-1-8-100-300-1-000</a>                       | pressure transmitter                           |
| <a href="#">Code: 100-4000-1-5-100-300-1-000</a>                       | Pressure Transmitter                           |
| <a href="#">Code: 100-4000-1-5-100-400-1-000</a>                       | Pressure Transmitter                           |
| <a href="#">Code: 100-0600-1-5-100-400-1-000</a>                       | Pressure Transmitter                           |
| <a href="#">Code: 592-3150-1-5-TR3-100-1-1-2-000</a>                   | Pressure Transmitter                           |
| <a href="#">Code: 110-M400-3-3-M10-F00-1-000</a>                       | Industrial Pressure Transmitter DMP 331        |
| <a href="#">ILAC-MRA</a>                                               | calibration certificate                        |
| <a href="#">Code: 18.601G-1600-R-1-8-100-300-1-000</a>                 | Submersible Pressure Transmitter               |
| <a href="#">Code: 600-V502-E-3-G10-100-1-000</a>                       | Pressure Transmitter                           |
| <a href="#">DMP 343 (0 ... 100 mbar)</a>                               | Low-Pressure Transmitter                       |
| <a href="#">DMP 343 (0 ... 300 mbar)</a>                               | Low-Pressure Transmitter                       |
| <a href="#">Code: 18.600G-V502-R-1-5-100-400-1-000</a>                 | ANALOUGE PRESSURE SENSOR1-5 BAR 4-20mA 1/4"    |

| Product                                                         | Description                                       |
|-----------------------------------------------------------------|---------------------------------------------------|
| <a href="#">Code: 250-2003-37-5-210-P00-1-1-2-008</a>           | pressure sensor                                   |
| <a href="#">130-4502-2-3-M00-D15-5-520</a>                      | PRESSURE TRANSMITTER                              |
| <a href="#">250-2503-1-5-TR0-400-1-1-2-000 DMK 331</a>          | Druckmessumformer                                 |
| <a href="#">26.600G-1002-R-1-5-100-300-1-000</a>                | Pressure transmitter                              |
| <a href="#">OXI14B</a>                                          | Wrench                                            |
| <a href="#">780-6002-1-2-3-N11-500-3-000</a>                    | sensor                                            |
| <a href="#">780-1603-1-2-3-N11-500-3-000</a>                    | sensor                                            |
| <a href="#">DMD 331/ Code 730-D-1001-1-8-100-200-1-000</a>      | Differenz - Druckmessumformer                     |
| <a href="#">46.607-3502-2-TR0-055</a>                           | High-Pressure Transmitter                         |
| <a href="#">DMP331 Code:110-1000-1-5-100-F00-1-000</a>          | Pressure transmitter                              |
| <a href="#">DMP-343 Code: 100-S025-3-5-100-300-1-000</a>        | Pressure transmitters                             |
| <a href="#">DMP343 Code: 100-S050-3-5-100-300-1-000</a>         | Druckmessumformer                                 |
| <a href="#">DMK 331 250-V152-1-5-100-F00-1-1-2-000</a>          | Druckmessumformer                                 |
| <a href="#">600-1002-1-3-G10-100-1-000</a>                      | Pressure transmitter                              |
| <a href="#">782-4000-1-1-5-N01-F00-1-1-2-000</a>                | Pressure Transmitter                              |
| <a href="#">730-E-1602-E-8-100-200-1-000</a>                    | Differential Pressure Transmitter                 |
| <a href="#">DMP 331P</a>                                        | Industrial Pressure Transmitter                   |
| <a href="#">DMK 351P / Code: 295-0400-1-3-100-M00-1-1-2-000</a> | Transmitter with flush diaphragm                  |
| <a href="#">DMP 331P, Code: 500-1002-1-3-100-Z33-1-1-1-200</a>  | Pressure Transmitter                              |
| <a href="#">590-1002-E-5-TS3-Z36-1-K-2-000</a>                  | Submersible Pressure Transmitter                  |
| <a href="#">DMP 331 110-M400-3-5-M00-300-1-000</a>              | Pressure Transmitter                              |
| <a href="#">ZMF2540</a>                                         | Montageflansch                                    |
| <a href="#">26.600G-V502-R-1-100-300-1-000</a>                  | 26.600 G                                          |
| <a href="#">DMP 333 130-4003-1-3-100-100-5-000</a>              | Industrial pressure transmitter                   |
| <a href="#">17.600 G-7003-R-1-5-M10-300-P-000</a>               | Pressure Transmitter                              |
| <a href="#">18.605G-4000-B-1-5-1-006-300-1-000</a>              | Pressure Transmitter                              |
| <a href="#">59B-D049-1-2-TR3-H00-1-8-2-000 Type DMK 458</a>     | Pressure Transmitter                              |
| <a href="#">DMP 331 , code 110-W070-1-3-100-100-1-000</a>       | pressure transmitter                              |
| <a href="#">DMK 457</a>                                         | Pressure transmitter                              |
| <a href="#">18.605G-1001-M-1-5-1-012-300-1-000</a>              | OEM pressure transmitter                          |
| <a href="#">590-V302-E-5-TS3-Z36-1-K-2-000</a>                  | DMK 457 pressure transmitter                      |
| <a href="#">M04-1602-0-B8-0K0-300-1-2-2-1-000</a>               | Digitalmanometer                                  |
| <a href="#">M00-1602-0-B5-0K0-400-1-1-2-1-000</a>               | Digital pressure gauges                           |
| <a href="#">470-D736-E-3-M10-M00-1-1-2-000</a>                  | screw-in probe                                    |
| <a href="#">LMK 351 471-0400-3-3-M10-M00-1-1-2-000</a>          | sensor                                            |
| <a href="#">600-1602-E-3-G10-300-1-000 Type DMP 457</a>         | SENSOR TRANSMITTER SENSOR STRIPPING PUMP          |
| <a href="#">250-6002-1-5-100-400-1-1-2-000 type DMK 331</a>     | Pressure Transmitter                              |
| <a href="#">250-1003-1-5-100-400-1-1-2-000 Type DMK 331</a>     | Pressure Transmitter                              |
| <a href="#">381-1001-1-2-1-1-5-1-020-000</a>                    | level transmitter                                 |
| <a href="#">LMK 382 Code: 565-2002-1-2-E-1-1-3-010-000</a>      | Edelstahl-Tauchsonde LMK 382, inkl. 10m PVC-Kabel |
| <a href="#">LMP 331, Code: 430-V152-1-1-3-1-100-5-000</a>       | Screw-in probe                                    |
| <a href="#">DMP 331, Code: 110-M160-3-5-M00-300-1-000</a>       | Pressure Transmitter                              |
| <a href="#">DMP 331, Code: 110-V152-3-3-100-300-1-000</a>       | Pressure Transmitter                              |

| Product                                                            | Description                               |
|--------------------------------------------------------------------|-------------------------------------------|
| <a href="#">26.600 G-1002-R-3-5-100-300-1-000</a>                  | OEM Pressure Transmitter 26.600G          |
| <a href="#">LMK 351 Code: 470-D736-E-3-M10-M00-1-1-2-000</a>       | Screw-in Transmitter                      |
| <a href="#">26.600 G-4002-R-1-5-100-200-1-000</a>                  | OEM Druckmessumformer 26.600 G            |
| <a href="#">785-LS02-1-1-2-100-C62-1-0-2-200</a>                   | Pressure Sensor                           |
| <a href="#">17.609 G-3002-R-1-5-M20-U00-2-000</a>                  | OEM pressure transmitter 17.609G          |
| <a href="#">140-1004-E-3-100-200-2-000</a>                         | Druckmessumformer DMP 334                 |
| <a href="#">17.600G-1002-R-1-5-100-300-Q-000</a>                   | Pressure Transmitter                      |
| <a href="#">110-1602-1-3-100-F00-1-000 (DMP 331)</a>               | Pressure Transmitter                      |
| <a href="#">DC8-4003-L5-2-207-300-1-000</a>                        | Druckmessumformer DCT 531                 |
| <a href="#">LMP 307 code 450-2501-1-1-1-1-3-1-030-000</a>          | Probe                                     |
| <a href="#">DS 4 (680-1002-1-0-Q00-Q00-5-000-000)</a>              | Elektronischer OEM-Druckschalter          |
| <a href="#">380-4000-1-2-E-1-5-1-015-000</a>                       | Tauchsonde LMK 307                        |
| <a href="#">110-1602-1-3-100-500-1-000 ( DMP 331)</a>              | Industrial Pressure Transmitter           |
| <a href="#">250-5002-1-5-100-500-1-1-2-000 (DMK 331)</a>           | Differential Pressure Transmitter         |
| <a href="#">566-1600-1-2-1-1-2-3-005-000</a>                       | Stainless steel probe                     |
| <a href="#">26.600 G-V302-R-1-5-100-300-1-000</a>                  | pressure transmitter                      |
| <a href="#">110 1002E 3 100 C00 1 006</a>                          | Pressure transmitter                      |
| <a href="#">110-4002-E-3-100-C00-1-006</a>                         | Pressure transmitter                      |
| <a href="#">110-2502-E-3-100-C00-1-006</a>                         | Pressure transmitter                      |
| <a href="#">111-1000-12-2-M00-200-1-115</a>                        | Pressure Transmitter                      |
| <a href="#">LMK 331 ( Code : 460-2501-1-5-M10-K00-3-B-2-000 )</a>  | Screw-in                                  |
| <a href="#">395-2500-R-C-1-1-3-4-010-000</a>                       | Immersion probe                           |
| <a href="#">110-4000-E-5-850-400-1-000</a>                         | Pressure transmitter                      |
| <a href="#">LMK 458 768-4001-K-1-2-1-1-4-2-000</a>                 | Sensor                                    |
| <a href="#">DMP 331 (Code: 110-2500-3-5-100-100-1-000)</a>         | Pressure transmitter                      |
| <a href="#">DMP457-600-6000-1-3-TR3-F00-1-003-000</a>              | Pressure transmitter                      |
| <a href="#">DX19-DMP 457 (601-D290-E-3TR3-H00-1-000)</a>           | Sensor                                    |
| <a href="#">140-P15K-E-3-850-V00-2-000</a>                         | industrial pressure transmitter           |
| <a href="#">30.600G Code: 30.600G-4001-R-1-8-100-300-2-1-000</a>   | Pressure transmitter                      |
| <a href="#">782-4003-E-2-5-N01-N00-5-1-2-000, Type: DS 201</a>     | Pressure Switch                           |
| <a href="#">26.600 G , Code: 26.600 G-4001-R-1-5-100-300-1-000</a> | Pressure transmitter                      |
| <a href="#">DS200 781-1602-1-2-3-N01-F00-1-000</a>                 |                                           |
| <a href="#">DS 200 781-2502-1-2-3-N01-F00-1-000</a>                | pressure switch DS 200                    |
| <a href="#">17.600 G-1603-R-1-5-100-400-2-000</a>                  | OEM pressure transmitter 17.600G          |
| <a href="#">730-D-6001-E-5-100-200-1-000</a>                       | DMD 331 differential pressure transmitter |
| <a href="#">DMP 331 Code: 110-M400-3-3-M00-300-1-000</a>           | Pressure transmitter                      |
| <a href="#">100-M010-1-5-100-100-1-000, Type: DMP 343</a>          | Pressure transmitter                      |
| <a href="#">430-D172-1-1-1-1-M00-3-000</a>                         | Screw-in probe                            |
| <a href="#">DMP 331 110-M100-3-5-M00-F00-1-000</a>                 | Pressure transmitter                      |
| <a href="#">411-2500-R-1-1-1-1-5-010-000</a>                       | Immersion probe                           |
| <a href="#">Type: LMP307, P/N: 450-1000-1-1-1-1-5-2-003-000</a>    | sensor                                    |
| <a href="#">110-LS03-E-3-850-400-1-000</a>                         | Pressure transmitter                      |
| <a href="#">26.600 G-2502-R-1-5-100-200-1-000</a>                  | Pressure Transmitter                      |



| Product                                                         | Description                                      |
|-----------------------------------------------------------------|--------------------------------------------------|
| <a href="#">DMD 331 Code: 730-F-0400-E-8-100-800-1-000</a>      | differential pressure transmitter                |
| <a href="#">451-1600-1-1-E-1-5-3-150-000</a>                    | Immersion probe LMP 307                          |
| <a href="#">451-1600-1-1-E-1-5-3-070-000</a>                    | Immersion probe LMP 307                          |
| <a href="#">DMP 331</a>                                         | LEVEL SENSORS                                    |
| <a href="#">DMP 331P (Code: 500-1601-1-3-100-Z00-1-1-1-000)</a> | pressure transmitter                             |
| <a href="#">250-6001-1-5-M10-H00-1-B-2-000</a>                  | Pressure Transmitter                             |
| <a href="#">DMP 343 Code: 100-0600-1-5-100-300-1-000</a>        | Pressure Transmitter                             |
| <a href="#">DMD 331 (Code: 730-E-2001-E-8-N1F-J00-7-000)</a>    | Differential Pressure Transmitter                |
| <a href="#">DMP 304 220-6004-1-5-100-P00-041</a>                | Hydraulic Pressure Transducer                    |
| <a href="#">LMK 307-308-1001-1-2-1-1-5-1-010-000</a>            | LEVEL TRANSMITTER                                |
| <a href="#">LMK 307-308-1001-1-2-1-1-5-1-020-000</a>            | LEVEL TRANSMITTER                                |
| <a href="#">LMK 307-308-1001-1-2-1-1-5-1-045-000</a>            | LEVEL TRANSMITTER                                |
| <a href="#">DMK 331</a>                                         | Pressure Transmitter                             |
| <a href="#">LMP 307</a>                                         | Stainless Steel Probe                            |
| <a href="#">DMP331-110-1002-1-3-100-H00-1-000</a>               | Pressure transmitter                             |
| <a href="#">LMP 331</a>                                         | Pressure sensor                                  |
| <a href="#">451-1000-1-1-1-1-5-2-003-000 - LMP 307</a>          | Pressure Sensor                                  |
| <a href="#">Conductor for 451-1000-1-1-1-1-5-2-003-000</a>      | 3-conductor                                      |
| <a href="#">110-1000-1-5-100-200-3-000</a>                      | Pressure Transmitter                             |
| <a href="#">470-1002-E-3-TR0-M00-1-1-2-000</a>                  | Screw-in probe                                   |
| <a href="#">111-2502-ES-3-TR1-200-1-037</a>                     | Pressure Transmitters                            |
| <a href="#">131-6002-ES-3-TR1-200-1-037</a>                     | Pressure Transmitters                            |
| <a href="#">131-2503-ES-3-TR1-200-1-037</a>                     | pressure transmitter                             |
| <a href="#">110-P020-ES-3-TR1-200-1-037</a>                     | pressure transmitter                             |
| <a href="#">131-4003-ES-3-TR1-200-1-037</a>                     | Pressure Transmitters                            |
| <a href="#">26.600 G-2503-R-1-5-100-300-1-000</a>               | OEM Pressure Transmitter                         |
| <a href="#">100-0500-3-5-100-300-1-000</a>                      | Pressure Transmitter                             |
| <a href="#">250-P5K8-E-5-M10-N40-1-1-2-000</a>                  | Pressure Transmitter                             |
| <a href="#">787-4003-0-2-5-N01-Z00-1-5-1-000</a>                | Submersible Pressure Transmitter                 |
| <a href="#">780-1602-1-1-3-N01-F00-1-000</a>                    | Electronic Pressure Switch                       |
| <a href="#">787-1003-0-2-5-N01-Z00-1-5-1-000</a>                | Electronic pressure switch                       |
| <a href="#">18.605G-2500-M-1-5-1-003-300-1-000</a>              | Submersible OEM Transmitter                      |
| <a href="#">18.605G-1000-M-3-5-1-003-300-1-000</a>              | Submersible OEM Transmitter                      |
| <a href="#">DMK 458 Code: 59B-D290-1-2-TR3-F23-1-8-2-000</a>    | Pressure Transmitters                            |
| <a href="#">LMK 458 Code: 768-D290-K-1-C-1-1-4-2-010-000</a>    | Submersible probe                                |
| <a href="#">DMP 331 110-6001-3-2-TR0-N40-1-000</a>              | Pressure Transmitter for Industrial Applications |
| <a href="#">CIT 750-1-U16-U16-UN5-1-4-100-000</a>               | Multi-channel process display                    |
| <a href="#">M0E-1002-0-B2-0K0-N40-1-1-1-1-000</a>               | Low-Pressure Transmitter                         |
| <a href="#">PVC-Kabel</a>                                       | .                                                |
| <a href="#">785-4000-1-1-3-N01-Z00-1-1-1-000</a>                | Submersible Level Transmitter                    |
| <a href="#">18.601G-1600-R-1-8-100-200-1-000</a>                | Pressure Transmitter for Gas Applications        |
| <a href="#">18.605-2500-B-1-5-1-006-300-1-000</a>               | High-Pressure Transmitter for Industrial Use     |
| <a href="#">780-V163-1-2-2-N01-100-1-000</a>                    | Electronic pressure switch DS 200                |

| Product                                                           | Description                                           |
|-------------------------------------------------------------------|-------------------------------------------------------|
| <a href="#">780-V323-1-2-2-N01-100-1-000</a>                      | pressure switch DS 200                                |
| <a href="#">780-V602-1-2-2-N01-100-1-000</a>                      | pressure switch DS 200                                |
| <a href="#">DAkKS</a>                                             | calibration certificate                               |
| <a href="#">DMK 458 59B-D290-1-2-TR1-F23-1-8-2-010</a>            | Pressure Transmitter                                  |
| <a href="#">LMK 307 (380-6000-1-2-1-1-5-1-020-000)</a>            | Submersible probe                                     |
| <a href="#">DS 201 782-1002-0-1-5-100-N00-1-1-2-000</a>           | pressure switch                                       |
| <a href="#">590-6001-1-5-G10-100-1-K-2-000</a>                    | Pressure Transmitter                                  |
| <a href="#">590-1002-1-5-G10-100-1-K-2-000</a>                    | Compact Pressure Transmitter for Liquid Applications  |
| <a href="#">380-1001-1-2-1-1-5-1-020-000</a>                      | Plunge probe                                          |
| <a href="#">DMP 331 110-6001-3-3-M10-300-1-000</a>                | Industrial Pressure Transmitter for Liquids and Gases |
| <a href="#">DMP 457 (600-1602-E-3-TR3-100-1-000)</a>              | Pressure Transmitters                                 |
| <a href="#">110-M160-3-5-100-300-1-000</a>                        | Pressure Transmitter DMP 331                          |
| <a href="#">140-1004-E-2-M10-D28-2-000</a>                        | Transducer                                            |
| <a href="#">LMP 307 (451-2500-1-1-1-1-5-1-005-000)</a>            | Stainless steel immersion probe                       |
| <a href="#">UPA2-600b/420/G1/2</a>                                | High-Pressure Transmitter for Industrial Applications |
| <a href="#">LMK 307 381-1001-1-2-1-1-5-1-015-000</a>              | HYDROSTATIC LEVEL SENSOR                              |
| <a href="#">DS 201 (782-4003-E-2-5-N01-100-5-1-2-000)</a>         | Electronic pressure switch DS 201                     |
| <a href="#">680-6001-1-0-Q00-Q00-5-013-000</a>                    | OEM electronic pushbutton switch DS 4                 |
| <a href="#">26.600 G-1003-R-3-5-100-200-1-000</a>                 | Pressure Transmitters                                 |
| <a href="#">110-S102-1-3-100-100-7-000</a>                        | Sensor                                                |
| <a href="#">DMK 331, Code: 250-V252-1-5-100-F00-1-1-2-000</a>     | Industrial Pressure transmitter                       |
| <a href="#">26.600 G-2502-R-1-5-100-300-1-000</a>                 | Pressure Transmitter 26.600G                          |
| <a href="#">26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-10 BAR)</a> | General Purpose Pressure Transmitter                  |
| <a href="#">26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-16 BAR)</a> | General Purpose Pressure Transmitter (0-16 Bar)       |
| <a href="#">26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-40 BAR)</a> | General Purpose Pressure Transmitter (0-40 Bar)       |
| <a href="#">26.600G-6001-R-1-5-100-300-1-000 (INPUT 0-60 BAR)</a> | General Purpose Pressure Transmitter (0-60 Bar)       |
| <a href="#">26.600 GJS21-R-1-8-100-N40-1-000</a>                  | OEM pressure transmitter 26.600 G                     |
| <a href="#">LMK 458</a>                                           | plunge probe                                          |
| <a href="#">DMK 458</a>                                           | pressure transmitter                                  |
| <a href="#">TPE-U-CABLE</a>                                       | TPE-U Extension Cable for BD Sensors Devices          |
| <a href="#">LMK 351 471-6000-1-3-100-M00-1-1-2-000</a>            | Sensor                                                |
| <a href="#">26.600 G-V502-R-1-5-M20-400-1-000</a>                 | OEM pressure transmitter 26,600G                      |
| <a href="#">LMP 331, Code: 431-2500-1-1-3-1-100-3-000</a>         | Screw-in probe                                        |
| <a href="#">DMK 331 250-1602-3-5-M00-H00-1-B-2-000</a>            | Industrial Pressure Transmitter                       |
| <a href="#">DMP 331-110-1002-1-3-100-100-1-000</a>                | Pressure transmitter                                  |
| <a href="#">DMP 331 Code:110-1601-1-1-100-300-1-000</a>           | Pressure Sensor                                       |
| <a href="#">DMP331 Code 110-1002-E-3-M00-100-5-000</a>            | Pressure Transmitter for Industrial Applications      |
| <a href="#">18601G, Code 1601-R-1-5-100-300-3-000</a>             | General Purpose Pressure Transmitter                  |
| <a href="#">LMK 487 (366-1000-1-1-C-1-7-4-3-003-502)</a>          | stainless steel plunge probe                          |
| <a href="#">DM01-A21</a>                                          | display for digital pressure gauge DM 01              |
| <a href="#">26.600 G-V252-R-1-5-100-300-1-000</a>                 | Pressure transmitter (Normal)                         |
| <a href="#">500-6001-1S-3-M10-C62-1-0-2-000</a>                   | pressure transmitter                                  |
| <a href="#">380-6001-1-2-1-1-5-3-010-000</a>                      | stainless steel plunge probe                          |



| Product                                                        | Description                                                                                                     |
|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <a href="#">110-6002-3-2-100-100-1-000</a>                     | Pressure transmitter DMP 331                                                                                    |
| <a href="#">250-6002-3-5-100-100-1-1-2-000</a>                 | Pressure transmitter DMK 331                                                                                    |
| <a href="#">18.601G-1001-A-3-5-100-100-1-000</a>               | OEM pressure transmitter                                                                                        |
| <a href="#">DMP 331 (110-6001-3-3-100-100-1-000)</a>           | pressure transmitter                                                                                            |
| <a href="#">26.600 G-6001-R-1-5-100-200-1-000</a>              | Pressure transmitter                                                                                            |
| <a href="#">18.601G-2501-R-1-5-100-200-1-000</a>               | Pressure transmitter                                                                                            |
| <a href="#">LMP 305 (400-4000-1-1-1-1-5-1-020-000)</a>         | Probe                                                                                                           |
| <a href="#">DS200 780-4003-E-1-3-N01-100-1-000</a>             | pressure switch                                                                                                 |
| <a href="#">DMP331-110-2001-1-2-100-100-1-000</a>              | Pressure transmitter                                                                                            |
| <a href="#">DMP331i-110-2001-1-1-100-100-1-111</a>             | Pressure transmitter                                                                                            |
| <a href="#">DMP331i-110-S100-1-1-100-100-1-111</a>             | Pressure transmitter                                                                                            |
| <a href="#">18.601G-2500-R-1-5-100-300-1-000</a>               | Pressure transmitter                                                                                            |
| <a href="#">LMP307-450-4000-1-1-1-1-5-1-030-000</a>            | Submersible probe                                                                                               |
| <a href="#">46.608-4002-2-TR0-000</a>                          | Pressure transmitter                                                                                            |
| <a href="#">250-1002-3-5-M10-F00-1-1-2-000</a>                 | pressure transmitter                                                                                            |
| <a href="#">780-1602-E-1-3-N11-100-1-070</a>                   | pressure switch                                                                                                 |
| <a href="#">780-1003-E-1-3-N11-100-1-070</a>                   | pressure switch                                                                                                 |
| <a href="#">780-4003-E-1-3-N11-100-1-070</a>                   | pressure switch                                                                                                 |
| <a href="#">500-V402-1S-3-M10-M76-1-0-2-000</a>                | pressure transmitter                                                                                            |
| <a href="#">600-1602-1-3-G10-100-1-000</a>                     | pressure transmitter                                                                                            |
| <a href="#">LMK307 381-4000-1-2-1-1-5-1-010-000</a>            | Stainless steel immersion probe                                                                                 |
| <a href="#">110-2502-3-3-100-C00-1-006</a>                     | pressure transmitter                                                                                            |
| <a href="#">110-6001-E-3-100-C00-1-006</a>                     | pressure transmitter                                                                                            |
| <a href="#">DMP 333 130-1003-1-3-100-100-5-000</a>             | Compact Pressure Transmitter for Low Pressure Measurement<br>Industrial Pressure Transmitter with High Accuracy |
| <a href="#">110-V402-1-3-M10-300-3-000</a>                     |                                                                                                                 |
| <a href="#">26.600G-Z102-R-1-8-100-200-1-000</a>               | OEM pressure transmitter                                                                                        |
| <a href="#">17.600 G-1002-R-1-5-100-300-Q-070</a>              | OEM pressure transmitter                                                                                        |
| <a href="#">110-2500-1-5-100-100-1-000</a>                     | pressure transmitter dmp 331                                                                                    |
| <a href="#">110-1000-1-5-100-100-1-000</a>                     | pressure transmitter dmp 331                                                                                    |
| <a href="#">111-1002-3-3-M10-300-1-000</a>                     | pressure transmitter                                                                                            |
| <a href="#">P/N: 110-2502-E-3-100-C00-1-006, Type: DMP 331</a> | Transmitter                                                                                                     |
| <a href="#">18.601G</a>                                        | OEM pressure transmitter                                                                                        |
| <a href="#">17.600 G-4003-R-3-5-100-300-P-000</a>              | OEM pressure transmitter                                                                                        |
| <a href="#">DMP 343 100-2500-E-3-100-200-1-000</a>             | Pressure transmitters                                                                                           |
| <a href="#">DMP 331 110-6001-3-3-M00-300-1-000</a>             | Pressure transmitter                                                                                            |
| <a href="#">LMK307-381-1001-1-2-1-1-5-3-065-000</a>            | Stainless steel immersion probe                                                                                 |
| <a href="#">DMP 331P Code: 501-1601-1-3-100-Z00-1-1-1-200</a>  | Pressure transmitter                                                                                            |
| <a href="#">LMK 307 381-1001-1-2-1-1-5-3-035-000</a>           | Submersible Level Transmitter for Water and Wastewater Applications                                             |
| <a href="#">DMK 458 59A-2500-E-2-G10-200-1-8-2-000</a>         | Pressure transmitters                                                                                           |
| <a href="#">EPS200G14SP12</a>                                  | Pressure sensor                                                                                                 |
| <a href="#">DMP 333 130-6003-1-2-100-500-1-000</a>             | Compact Pressure Transmitter for Medium Pressure Measurement                                                    |
| <a href="#">26.600G-V502-R-1-5-100-300-1-000</a>               | OEM-Pressure transmitter                                                                                        |

| Product                                                           | Description                                                    |
|-------------------------------------------------------------------|----------------------------------------------------------------|
| <a href="#">DMP 331 110-1001-E-3-100-F00-1-000</a>                | pressure transmitter                                           |
| <a href="#">26.600 G-1002-R-1-5-M20-300-1-000</a>                 | OEM pressure transmitter                                       |
| <a href="#">P/N: 110-LS03-E-3-100-N00-1-000, Type: DMP 331</a>    | Pressure transmitters                                          |
| <a href="#">P/N: 110-1002-E-3-100-C00-1-006, Type: DMP 331</a>    | Pressure transmitters                                          |
| <a href="#">P/N: 110-6001-E-3-100-C00-1-006, Type: DMP 331</a>    | Pressure transmitters                                          |
| <a href="#">P/N: 602-6002-1-3-G10-100-1-000, Type: DMP 457</a>    | Pressure transmitters                                          |
| <a href="#">P/N: 110-2500-1-5-100-100-1-000, Type: DMP 331</a>    | Pressure transmitters                                          |
| <a href="#">17.600 G-6001-R-1-B5-100-N40-2-000</a>                | Pressure transmitters                                          |
| <a href="#">P/N: 450-1001-1-1-1-3-1-010-000, Type: LMP 307</a>    | submersible probe                                              |
| <a href="#">P/N: 566-6000-1-2-1-1-3-010-000, Type: LMK 382</a>    | submersible probe                                              |
| <a href="#">P/N: 111-1002-1-3-100-100-1-000, Type: DMP 331</a>    | Pressure transmitters                                          |
| <a href="#">Code: 381-4000-1-2-3-1-5-1-005-000</a>                | Submersible Level Transmitter for Water Applications           |
| <a href="#">115-6002-3-1-100-300-1-000</a>                        | Industrial Pressure Transmitter for High Accuracy Applications |
| <a href="#">DMP 331 110-1000-1-5-100-200-1-000</a>                | Pressure transmitters                                          |
| <a href="#">P/N: 130-2503-1-3-100-100-1-000, Type: DMP 333</a>    | Pressure transmitters                                          |
| <a href="#">M0K-1003-0-B1-100-1-000</a>                           | Precision digital pressure gauges                              |
| <a href="#">DMP 457 Code: 600-1602-E-3-TR3-300-1-000</a>          | pressure transmitter                                           |
| <a href="#">500-6001-1-3-100-Z00-1-1-2-000</a>                    | pressure transmitter DMP 331P                                  |
| <a href="#">111-1602-1-3-M10-N40-1-000</a>                        | pressure transmitter DMP 331                                   |
| <a href="#">111-6001-1S-3-M10-N40-1-000</a>                       | pressure transmitter DMP 331                                   |
| <a href="#">LMK 809</a>                                           | submersible probe                                              |
| <a href="#">26.600G-2502-R-3-5-100-300-1-000</a>                  | water/air pressure sensor                                      |
| <a href="#">M00-1002-0-B5-0K0-200-1-1-2-1-000</a>                 | digital pressure gauge                                         |
| <a href="#">M0K-2502-0-B1-100-1-000</a>                           | Pressure transmitter for digital pressure gauge DM 01          |
| <a href="#">M0K-6000-0-B1-100-1-000</a>                           | Pressure transmitter for digital pressure gauge DM 01          |
| <a href="#">501-1002-1-3-100-C61-1-0-2-205 Type DMP 331P</a>      | pressure transmitter                                           |
| <a href="#">DS200 781-1001-7J-1-3-N11-100-1-000</a>               | electronic pressure switch                                     |
| <a href="#">LMP 307 // 307-451-1600-1-1-E-1-5-3-070-000</a>       | stainless steel immersion probe                                |
| <a href="#">DMP 321</a>                                           | Pressure transmitter                                           |
| <a href="#">26.600 G-1002-R-1-8-100-300-1-000</a>                 | OEM pressure transmitter                                       |
| <a href="#">Code: 251-2001-1-5-M10-300-1-1-2-000 Type DMK 331</a> | Pressure transmitter                                           |
| <a href="#">815-0016-3Z-0-G-0-N-Y00-M-000</a>                     | Differential pressure transducer                               |
| <a href="#">Type DMP 331i Code: 110-1002-1-1-M10-200-2-111</a>    | Pressure transducer                                            |
| <a href="#">59A-1602-E-2-TR3-H00-1-8-2-000</a>                    | Pressure transmitter                                           |
| <a href="#">DS 210 78A-M250-7-1-3-N01-300-1-000</a>               | pressure switch                                                |
| <a href="#">DMP 331 110-M200-1-5-100-300-1-000</a>                | Pressure transmitter                                           |
| <a href="#">DMP331 / 110-V202-1-3-100-100-1-000</a>               | PRESSURE TRANSMITTER                                           |
| <a href="#">DMP343 100-0500-3-5-100-300-1-000</a>                 | Pressure transmitter                                           |
| <a href="#">110-6000-E-1-100-F00-1-000</a>                        | liquid level probe                                             |
| <a href="#">AX14-DS 201 /782-4003-E-2-5-N01-N00-5-1-2-000</a>     | Pressure Transmitter for Hydraulic Applications                |
| <a href="#">111-1002-E-3-850-N00-1-000</a>                        | Pressure Transmitter for General Industrial Use                |
| <a href="#">111-1002-E-3-880-N00-1-000</a>                        | pressure transmitter                                           |
| <a href="#">590-V602-E-5-TS3-Z36-1-K-2-000</a>                    | Pressure transmitter                                           |

| Product                                                            | Description                                          |
|--------------------------------------------------------------------|------------------------------------------------------|
| <a href="#">441-6000-1-1-1-1-1-5-020-000</a>                       | stainless steel submersible probe                    |
| <a href="#">26.600G-1003-R-3-5-TM0-300-1-000 (OEM)</a>             | Pressure transmitter                                 |
| <a href="#">LMP331 430-0600-1-1-1-1 100-8-000</a>                  | pressure sensor                                      |
| <a href="#">18.600G-M250-R-1-5-100-300-1-000</a>                   | Pressure Transmitter                                 |
| <a href="#">DMK33112</a>                                           | Industrial pressure transmitter                      |
| <a href="#">600-V502-1-3-G10-100-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">600-6001-1-3-G10-100-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">600-4001-1-3-G10-100-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">600-4002-1-3-G10-100-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">500-1002-1-2-100-C61-1-0-1-000</a>                     | Pressure transmitter                                 |
| <a href="#">450-4000-1-1-1-1-3-1-005-000</a>                       | level probe                                          |
| <a href="#">110-6001-1-3-M10-F00-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">110-1602-1-3-100-F00-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">110-1602-1-3-M10-F00-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">110-6002-1-3-100-F00-1-000</a>                         | Pressure transmitter                                 |
| <a href="#">DMP 331 110-2502-E-1-850-100-1-000</a>                 | Pressure sensor                                      |
| <a href="#">18.601G-0500-R-3-8-100-300-1-000</a>                   | Pressure probe                                       |
| <a href="#">18.601G-0500-R-3-8-M20-400-1-000</a>                   | Pressure probe                                       |
| <a href="#">DMP331 110-2500-2-5-100-1-006 (U)</a>                  | pressure sensor                                      |
| <a href="#">DMP331 / 111-1001-3-3-100-100-1-000</a>                | Pressure transmitter                                 |
| <a href="#">DMP321-115-4003-1 -2-100-N40-1-000</a>                 | Pressure sensor                                      |
| <a href="#">18.605G-2500-B-1-5-1-006-300-1-000</a>                 | OEM submersible pressure transmitter                 |
| <a href="#">DMP331i 110-9999-3-1-100-300-1-111</a>                 | Pressure sensor                                      |
| <a href="#">DMK 457 590-1602-E-5-TS3-Z36-1-K-2-000</a>             | Pressure sensor                                      |
| <a href="#">Code 500-5001-1-3-100-C62-1-0-2-000 Type DMP 331P</a>  | Pressure transmitter                                 |
| <a href="#">DMP 331 / 110-1600-1-5-TAO-100-1-000</a>               | Sensor                                               |
| <a href="#">Code 330-0600-1-8-M10-Q00-6-000 Type DMD 341</a>       | Differential pressure transmitter                    |
| <a href="#">Code: 110-6000-E-1-100-F00-1-000 Type DX19-DMP 331</a> | Pressure transmitter                                 |
| <a href="#">591-2501-1-5-TT3-H00-1-1-2-000</a>                     | Pressure transmitter                                 |
| <a href="#">591-1601-1-5-TT3-H00-1-1-2-000</a>                     | Pressure transmitter                                 |
| <a href="#">18.605G / 18.605-6000-M-1-5-1-009-300-1-000</a>        | Pressure transmitter                                 |
| <a href="#">590-2502-1-5-TT3-N00-1-1-2-000</a>                     | High-Pressure Transmitter for Demanding Applications |
| <a href="#">DMP331 110-1602-1-3-100-F00-1-000</a>                  | Pressure sensor                                      |
| <a href="#">DMP331 110-1602-1-3-M10-F00-1-000</a>                  | Pressure sensor                                      |
| <a href="#">CIT 400 PH0-F-2-E-6-B-000</a>                          | display                                              |
| <a href="#">26.600G-1002-R-1-5-100-300-1-000 (G1/4")</a>           | Pressure transmitter                                 |
| <a href="#">PH0-F-2-E-6-N-000</a>                                  | Process display                                      |
| <a href="#">DMP 333 130 2503 1 5 100 200 1 000</a>                 | Pressure Transmitter                                 |
| <a href="#">DMP 331 110 4002 1 5 100 200 1 000</a>                 | Pressure Transmitter                                 |
| <a href="#">DMP 331 110 4001 1 5 100 200 1 000</a>                 | Pressure Transmitter                                 |
| <a href="#">DMP 331 110 1002 E 5 100 200 1000</a>                  | Pressure Transmitter                                 |
| <a href="#">DMP 333 / 130 4003 E 3 100 200 1 000</a>               | pressure transducer                                  |
| <a href="#">DMP 333 130 7003 E 3 100 200 1 000</a>                 | Pressure Transmitter                                 |

| Product                                                     | Description                                                      |
|-------------------------------------------------------------|------------------------------------------------------------------|
| <a href="#">DMP 333 / 130 1003 E 3 100 200 1 000</a>        | pressure transducer                                              |
| <a href="#">DMD 331 Code: 110-2502-E-3-100-C00-1-006</a>    | Pressure Transmitter for General Industrial Applications         |
| <a href="#">DMP 331P 500-6001-1S-3-M10-C52</a>              | Pressure transmitter                                             |
| <a href="#">250-4000-1-5-M10-H00-1-B-2-0</a>                | Pressure transmitter                                             |
| <a href="#">250-4000-1-5-M10-H00-1-B-2-000</a>              | Pressure transmitter                                             |
| <a href="#">30.600G-1002-R-1-8-100-N40-2-1-000</a>          | Submersible Pressure Sensor for Liquid Level Measurement         |
| <a href="#">LMP331-431-2500-1-1-1-1-100-5-000</a>           | Pressure sensor                                                  |
| <a href="#">LPM 331 (431-2500-1-1-1-3-100-5-000)</a>        | Screw-in probe                                                   |
| <a href="#">26.600 G-6002-R-1-5-TM0-N40-1-000</a>           | Pressure Transmitter                                             |
| <a href="#">26.600 G-2502-R-1-5-TM0-N40-1-000</a>           | pressure transmitter                                             |
| <a href="#">LMP 307 451-2502-1-1-1-1-1 200-000</a>          | Low Pressure Transmitter for Environmental Monitoring            |
| <a href="#">18-605G-6000-M-1-5-1-012-300-1-000</a>          | Pressure transmitter                                             |
| <a href="#">17.600 G-6003-R-3-5-100-300-P-070</a>           | Submersible Pressure Sensor for High-Pressure Liquid Measurement |
| <a href="#">460-6001-1-5-M10-K00-3-1-2-000</a>              | Industrial Pressure Transmitter for Process Applications         |
| <a href="#">460-1002-1-5-M10-K00-3-1-2-000</a>              | Pressure Transmitter for Low-Pressure Systems                    |
| <a href="#">DMP 320 -11C-1003-7-1-100-100-1-000</a>         | Pressure sensor                                                  |
| <a href="#">DX14-LMK 351 470-D736-E-3-M10-M00-1-1-2-000</a> | Screw-in probe                                                   |
| <a href="#">30.600G-1003-R-1-8-100-300-2-1-000</a>          | Pressure transducer                                              |
| <a href="#">30.600G-1603-R-1-8-100-300-2-1-000</a>          | Pressure transducer                                              |
| <a href="#">26.600 G-1003-R-1-5-100-300-1-000</a>           | Submersible Pressure Sensor for Liquid Measurement               |
| <a href="#">26.600 G-1603-R-1-5-100-300-1-000</a>           | Submersible Pressure Sensor for Liquid Monitoring                |
| <a href="#">DMP343 100-d220-1-3-100-100-1-000</a>           | Industrial Pressure transmitter                                  |
| <a href="#">LMK358-446-1001-1-2-H-1-2-1-015-000</a>         | Hydrostatic Pressure Sensor for Sewage and Sludge Applications   |
| <a href="#">391-1601A-2-1-1-5-1-020-000</a>                 | Submersible probe                                                |
| <a href="#">30.600 G-2502-R-1-8-100-300-2-1-000</a>         | Industrial Pressure Transmitter                                  |
| <a href="#">100-0400-1-5-100-100-1-000</a>                  | pressure transducer                                              |
| <a href="#">G-D025-R-1-5-100-H00-1-582</a>                  | OEM pressure transmitter                                         |
| <a href="#">18.605G-1001-M-1-5-1-006-300-1-000</a>          | OEM pressure transmitter                                         |
| <a href="#">766-1601-1-3-2-1-1-4-2-003-000</a>              | Level probe                                                      |
| <a href="#">766-4000-1-3-2-1-1-4-2-015-000</a>              | Level probe                                                      |
| <a href="#">LMK 458 4000-1-3-2-1-1-4-2-015-000</a>          | Hydrostatic Pressure Sensor for High-Pressure Applications       |
| <a href="#">LMK 458 766-1601-1-3-2-1-1-4-2-003-000</a>      | Submersible Pressure Sensor for Low-Level Monitoring             |
| <a href="#">DX19-DMP 457 / 602-WS03-E-5-TR3-200-1-000</a>   | pressure transducer                                              |
| <a href="#">DMP 333 / 130-2503-E-3-100-200-1-000</a>        | pressure transducer                                              |
| <a href="#">DMP 331 / 110-4002-E-3-100-200-1-000</a>        | pressure transducer                                              |
| <a href="#">DMP 331 / 110-4001-E-3-100-200-1-000</a>        | pressure transducer                                              |
| <a href="#">DMP 331 / 110-1002-E-3-100-200-1-000</a>        | pressure transducer                                              |
| <a href="#">DMP 334 / 140-7003-E-3-100-200-2-000</a>        | pressure transducer                                              |
| <a href="#">250-1601-ES-5-M10-N40-1-1-2-000</a>             | DMK 331 pressure transmitter                                     |
| <a href="#">430-D172-1-1-1-1-M10-3-000</a>                  | Precision Pressure Transmitter                                   |
| <a href="#">LMK351 / 470-4001-1-3-TA0-M00-1-B-2-000</a>     | screw-in probe                                                   |
| <a href="#">M00-1002-0-B5-0K0-200-1-1-2-N-000</a>           | digital pressure gauge                                           |
| <a href="#">DMP 331 / 110-1002-1S-3-M10-100-1-000</a>       | Industrial Pressure Transmitter                                  |

| Product                                                         | Description                                          |
|-----------------------------------------------------------------|------------------------------------------------------|
| <a href="#">17.600 G-1002-R-1-5-M20-400-2-000</a>               | 17.600G OEM Pressure Transmitter                     |
| <a href="#">LMK 358H / 446-1501-1-2-H-1-2-1-040-000</a>         | LMK 358H stainless steel submersible probe           |
| <a href="#">DS200 // 780-1603-1-1-3-N01-N00-1-000</a>           | Electronic Pressure Switch                           |
| <a href="#">LMK 358H (446-1501-1-2-H-1-0-1-000-000</a>          | Hydrostatic Level Sensor for Aggressive Media        |
| <a href="#">DMP336-215-1603-1-5-M10-200-2-007</a>               | Industrial Pressure Transmitter                      |
| <a href="#">DMK 457-590-2503-1-5-TS3-100-1-K-2-000</a>          | Pressure Transmitter                                 |
| <a href="#">TPE-U-Kabel</a>                                     | Thermoplastic Elastomer Cable for BD Sensors Devices |
| <a href="#">DMK 351P / Code: 295-V902-1-3-M10-C62-7-1-2-000</a> | Sensor                                               |
| <a href="#">DMP 343 code: 100-0400-1-100-100-000</a>            | Low Pressure Transmitter                             |
| <a href="#">dmp331 110-4001-1-5-100-500-1-000</a>               | sensors                                              |
| <a href="#">17.600G</a>                                         | Industrial Pressure Transmitter                      |
| <a href="#">M00-1001-0-B5-0K0-200-1-1-2-1-000</a>               | BAROLI 05 digital pressure gauge                     |
| <a href="#">780-4003-E-2-3-N11-100-1-070</a>                    | pressure switch                                      |
| <a href="#">500-1602-E-3-100-Z00-1-1-1-000</a>                  | Submersible Pressure Transmitter                     |
| <a href="#">130-4003-E-3-100-100-5-000</a>                      | High-Pressure Transmitter                            |
| <a href="#">450-6000-1-1-1-1-3-1-010-000</a>                    | Level probe                                          |
| <a href="#">DMP 331 110-4001-1-3-100-100-3-000</a>              | Precision Pressure Transmitter                       |
| <a href="#">DMP 331 110-1000-E-5-100-200-2-000</a>              | Standard Pressure Transmitter                        |
| <a href="#">DMP 331 110-1002-E-3-100-100-1-000</a>              | Compact Pressure Transmitter                         |
| <a href="#">DMK 351 290-1000-E-3-100-100-1-1-2-007</a>          | Differential Pressure Transmitter                    |
| <a href="#">600-V502-E-3-G10-100-1-000</a>                      | Pressure Transmitter                                 |
| <a href="#">DC7-2501-L5-2-N11-N40-1-000</a>                     | Submersible Level Transmitter                        |
| <a href="#">500-1002-1-2-100-Z00-1-1-1-000</a>                  | Pressure sensor                                      |
| <a href="#">DS 200 780-4003-1-1-3-100-200-1-070</a>             | electronic pressure switch                           |
| <a href="#">DMK 331 / 250-2501-1-5-100-H00-1-B-2-000</a>        | Pressure transmitter                                 |
| <a href="#">LMP 331 / 430-JS49-1-1-E-1-E00-5-818</a>            | screw-in probe                                       |
| <a href="#">DMP 331 P / 501-6001-1-3-100-C61-1-0-2-205</a>      | Pressure transmitter                                 |
| <a href="#">DMP331-110-S102-1-3-100-200-1-000</a>               | sensor                                               |
| <a href="#">26.600 G-X102-R-1-8-100-1-000</a>                   | General Purpose Pressure Transmitter                 |
| <a href="#">780-4003-1-1-3-100-300-1-070</a>                    | High-Performance Pressure Transmitter                |
| <a href="#">130-1003-E-3-850-N40-5-000 / DMP 333</a>            | Pressure transmitter                                 |
| <a href="#">Code: M0E-2500-0-B2-0K0-N00-1-1-1-1-000</a>         | manometer                                            |
| <a href="#">100-6000-1-3-100-100-1-000</a>                      | DMP 343 Pressure Transmitter                         |
| <a href="#">DMP 343 100-6000-1-3-100-200-1-000</a>              | Low Pressure Transmitter                             |
| <a href="#">110-1001-1-2-M10-F00-1-000</a>                      | Pressure transmitter                                 |
| <a href="#">DMP 343 100-0400-1-3-N00-1-000</a>                  | Low Pressure Transmitter                             |
| <a href="#">590-1002-E-5-G10-100-1-K-2-000</a>                  | Pressure transmitter                                 |
| <a href="#">LMP 331/ 430-1000-1-1-1-1-100-1-000</a>             | screw-in probe                                       |
| <a href="#">DMP331-111-2001-7-3-TA0-30 0-1-000</a>              | Industrial Pressure Transmitter                      |
| <a href="#">366-2500-1-1-C-1-1-4-3-003-000</a>                  | LMK 487 stainless steel submersible probe            |
| <a href="#">LMK 382/566-1600-1-2-1-1-2-3-005-000</a>            | Submersible Level Transmitter                        |
| <a href="#">100-D265-1-5-100-100-1-000</a>                      | Compact Pressure Transmitter                         |
| <a href="#">DCT 533-DC2-4000-IO-5M17-200-2-000</a>              | Pressure Transmitter                                 |

| Product                                                           | Description                                                   |
|-------------------------------------------------------------------|---------------------------------------------------------------|
| <a href="#">LMK 358 / 446-1601-1-2-1-1-2-3-020-000</a>            | Separable stainless steel submersible probe                   |
| <a href="#">KL 2 / KL 2-ZB.601-201-000</a>                        | terminal housing                                              |
| <a href="#">DMK 331 250-4000-1-5-100-H00-1-B-2-000</a>            | Pressure transmitter                                          |
| <a href="#">470-2500-1-3-M10-M00-1-B-2-000</a>                    | Submersible Level Transmitter                                 |
| <a href="#">DMK 331P / 505-6003-E-5-100-Z00-1-1-1-000</a>         | Pressure transmitter                                          |
| <a href="#">110-D558-E-5-100-N00-1-000</a>                        | Industrial Pressure Transmitter                               |
| <a href="#">110-S050-E-5-100-N00-1-000</a>                        | Compact Industrial Pressure Transmitter                       |
| <a href="#">DS201-782-1002-0-1-5-100-H00-3-B-2-000</a>            | low pressure switch                                           |
| <a href="#">566-1001-1-2-E-1-2-3-010-000</a>                      | Level Sensor                                                  |
| <a href="#">768-D291-1-1-3-2-1-1-4-2-003-000</a>                  | Submersible Level Transmitter                                 |
| <a href="#">601-D049-1-3-TR3-F00-1-000</a>                        | Differential Pressure Transmitter                             |
| <a href="#">601-D290-1-3-TR3-F00-1-000</a>                        | Differential Pressure Transmitter                             |
| <a href="#">DMP 331 / 110-M400-1-1-100-300-1-000</a>              | Industrial Pressure Transmitter                               |
| <a href="#">DMP 331 / 110-4000-1-1-100-300-1-000</a>              | High-Pressure Industrial Transmitter                          |
| <a href="#">Measurement report 11 points/3 cycles</a>             | Measurement Report for Calibration                            |
| <a href="#">601-D049-E-3-TR3-H00-3-000</a>                        | Pressure transmitter                                          |
| <a href="#">DMP343 100-0100-1-5-100-N40-1-000</a>                 | Industrial Pressure Transmitter                               |
| <a href="#">Type DMK 457 Code 592-6980-1-5-TR3-100-1-1-2-000</a>  | Pressure transmitter                                          |
| <a href="#">Type DMK 457 Code 592-6450-1-5-TR3-100-1-1-2-000</a>  | Pressure transmitter                                          |
| <a href="#">600-1602-E-3-G10-100-1-000</a>                        | Pressure transmitter                                          |
| <a href="#">Type DMK 457 Code 592-2501-1-5-TT33-100-1-1-2-000</a> | Pressure transmitter                                          |
| <a href="#">DMK387-285-2000-1-3-100-L00-1-B-C-000</a>             | Precision Differential Pressure Transmitter                   |
| <a href="#">LMK 351 Code: 470-0600-3-3-100-M00-3-B-C-000</a>      | Hydrostatic Level Transmitter                                 |
| <a href="#">LMK 307 / 380-6000-1-2-1-1-5-1-015-000</a>            | stainless steel submersible probe                             |
| <a href="#">46.607-4002-2-TR0-000</a>                             | Pressure transmitter                                          |
| <a href="#">XMP i / 511-2002-A0-H-1-AK0-200-1-1-1-000</a>         | precision pressure transmitter                                |
| <a href="#">DMK 331 250-6002-3-5-100-100-1-1-2-000</a>            | Pressure transmitter                                          |
| <a href="#">110-2502-E-3-100-F00-1-00</a>                         | Transmitter                                                   |
| <a href="#">18 605G 6000 M 1 5 1 009 300 1 000</a>                | probe                                                         |
| <a href="#">DMK 331 / 250-4001-1-5-100-100-1-1-2-000</a>          | pressure sensor                                               |
| <a href="#">LMP 307-451-4000-1-1-1-1-5-1 -003-00R</a>             | Submersible Pressure Transmitter for Liquid Level Measurement |
| <a href="#">381-6000-1-2-1-1-5-1-010-000</a>                      | Hydrostatic level                                             |
| <a href="#">600-3000-1-5-TR3-F00-1-000</a>                        | sensor                                                        |
| <a href="#">YLMP307212TR</a>                                      | Customized Pressure Transmitter for Special Applications      |
| <a href="#">340-2501-1-A0-H-17-AK0-N56-1-1-1-000</a>              | XMD differential pressure transmitter                         |
| <a href="#">381-4000-1-2-1-1-5-1-006-000</a>                      | General Purpose Pressure Transmitter                          |
| <a href="#">600-4000-1-3-G10-100-1-000</a>                        | Pressure Transmitter for Industrial Applications              |
| <a href="#">100-0100-1-5-M10-300-1-000 // DMP343</a>              | pressure transmitter                                          |
| <a href="#">DMD 331// 730-E-4001-1-8-100-200-1-000</a>            | differential pressure transmitter                             |
| <a href="#">DMP 331P (501-2501-3-3-TA0-Z00-1-7-1-200 )</a>        | Pressure transmitter                                          |
| <a href="#">DMD 331-730-F-1000-E-5-100-J00-1-000</a>              |                                                               |
| <a href="#">LMK351-471-2500-1-3-100-M00-1-1-2-000</a>             | Screw-in Transmitter                                          |
| <a href="#">592-9740-1-5-TR3-100-1-K-2-000</a>                    | PRESURE MEASUREMENT                                           |



| Product                                                      | Description                          |
|--------------------------------------------------------------|--------------------------------------|
| <a href="#">59C-9740-1-2-TR3-H00-1-K-2-000</a>               | PRESURE MEASUREMENT                  |
| <a href="#">59C-6550-1-2-TR3-100-1-8-2-000</a>               | PRESURE MEASUREMENT                  |
| <a href="#">DMK 458-59C-9740-1-2-TR3-H00-1-K-2-000</a>       |                                      |
| <a href="#">DMK 458-59C-6550-1-2-TR3-100-1-8-2-000</a>       |                                      |
| <a href="#">26.600 G-1602-R-3-5-100-300-1-000</a>            |                                      |
| <a href="#">DMK 331P / 505-1603-1-5-200-Z00-1-1-1-200</a>    | pressure transmitter                 |
| <a href="#">766-2001-1-1-2-E-1-4-2-025-000</a>               |                                      |
| <a href="#">LMK 351 Code: 470-2501-1-3-TA0-M00-1-1-2-000</a> | screw-in probe                       |
| <a href="#">LMP307 Code: 450-4000-1-1-1-1-5-1-006-000</a>    | Level probe                          |
| <a href="#">M01-1002-0-B5-0K0-N00-1-1-2-1-000</a>            | Pressure switch                      |
| <a href="#">30.600G-6002-R-1-8-100-300-2-1-000</a>           |                                      |
| <a href="#">266182 / 26600 G 6002-R-1-5-100-400-1-000</a>    |                                      |
| <a href="#">DMP 331 110 4002 E 3 100 C00 1 006</a>           | PRESSURE SENSOR                      |
| <a href="#">DMP 331 110 2502 E 3 100 C00 1 006</a>           | Pressure sensor                      |
| <a href="#">18.601G-S102-R-1-5-M20-300-1-000</a>             | OEM pressure transmitter             |
| <a href="#">LMK 807 / 391-1601-RA-2-1-1-5-1-020-000</a>      |                                      |
| <a href="#">LMK 807 391-1601-R-2-1-1-5-1-020-000</a>         |                                      |
| <a href="#">110-M400-3-5-M10-F00-1-000</a>                   |                                      |
| <a href="#">DS200 780-1603-1-1-3-N01-100-1-000</a>           | Electronic pressure switch           |
| <a href="#">110-M400-3-5-M10-300-1-000</a>                   |                                      |
| <a href="#">DMK 331P 505-1002-1-5-100-Z00-1-1-2-000</a>      |                                      |
| <a href="#">DMP 321 - 115-1002-3-2-100-100-1-000</a>         | Pressure transmitter                 |
| <a href="#">505-L010-E-5-170-Z00-1-7-1-200</a>               |                                      |
| <a href="#">850-E-0-100-4-1-000</a>                          |                                      |
| <a href="#">511-S102-A0-I-1-AK0-N00-1-1-1-000</a>            | XMPi Precision Pressure Transmitter  |
| <a href="#">511-1002-A0-I-1-AK0-N00-1-1-1-000</a>            | XMPi Precision Pressure Transmitter  |
| <a href="#">CIT 400 / PH0-H-2-S-5-N-000</a>                  | Process display                      |
| <a href="#">685-2003-2-0-M13-300-1-000-000</a>               | DS 6 OEM electronic pressure switch  |
| <a href="#">DMK457 / 592-6980-1-5-TR3-100-1-1-2-00</a>       | Pressure transmitter                 |
| <a href="#">DKM457 / 592-6450-1-5-TR3-100-1-1-2-00</a>       | Pressure transmitter                 |
| <a href="#">18.601G-6000-R-1-5-100-100-1-000</a>             | pressure transmitters                |
| <a href="#">LMK 307 / 380-6000-1-2-1-1-5-1-010-000</a>       |                                      |
| <a href="#">18.601G-1002-R-1-5-100-100-1-000</a>             | OEM pressure transmitter             |
| <a href="#">DMP 320 11C-2503-7-1-100-300-1-000</a>           | precision pressure transmitter       |
| <a href="#">26.600 G-1601-R-1-5-100-300-1-000</a>            | Pressure transmitter                 |
| <a href="#">26.600G-2503-R-3-5-100-300-1-000</a>             | PRESSURE TRANSMITTER FOR WATER MAKER |
| <a href="#">26.600G-1603-R-3-5-100-300-1-000</a>             | SENSOR                               |
| <a href="#">26.600 G-2503-R-6-5-TM0-300-1-000</a>            |                                      |
| <a href="#">M0G-6001-0-B5-0K0-C62-0-1-1-2-000</a>            | Sensor                               |
| <a href="#">M0E-2500-0-B5-0K0-N00-1-1-1-1-000</a>            |                                      |
| <a href="#">78H-4000-0-2-5-N01-N00-1-000</a>                 |                                      |
| <a href="#">17.600 G-2502-R-1-5-100-300-Q-000</a>            |                                      |