



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Novtec

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### hnikBRNADn'BS PN

| DcOUCTr                                         | BedTcusruOp                      |
|-------------------------------------------------|----------------------------------|
| <a href="#">P/N:01N9550255T1</a>                | Switch disconnectors             |
| <a href="#">P//501N9550599-N</a>                |                                  |
| <a href="#">P//:01N9550/91T1</a>                | Switch disconnectors             |
| <a href="#">P//:01N1550599T1</a>                | switch disconnectors             |
| <a href="#">P/9901N95502N5T1</a>                | Switch disconnecter              |
| <a href="#">P15:01N955059981</a>                | Switch disconnecter              |
| <a href="#">P15°01N9550332-1</a>                | load0break switch                |
| <a href="#">-//50:N513</a>                      |                                  |
| <a href="#">-//50:12:35</a>                     | cam switch                       |
| <a href="#">-//50:N5/20559-N</a>                | rotary cam switches              |
| <a href="#">-//5:N5150559-N</a>                 | .                                |
| <a href="#">-//50:NN3N0/N3-N</a>                | On 4 Off Switch                  |
| <a href="#">-//506R0/3N°</a>                    | Special switch                   |
| <a href="#">-//N0:12:°M</a>                     | Tockenschalter                   |
| <a href="#">-DP/0NNA5/</a>                      | AuUiliary contact module         |
| <a href="#">I//50:N5920/N3-N</a>                | Switch                           |
| <a href="#">ICN/5D0//5</a>                      |                                  |
| <a href="#">ICN:5-0//5</a>                      | With the SP6LLEH IATE7S WGLP VAT |
| <a href="#">IC°5°0//5</a>                       | Van                              |
| <a href="#">S/N/0:1M9:/</a>                     | Sonderschalter                   |
| <a href="#">L//M0G0°N/N</a>                     | Star Lriangle Switch             |
| <a href="#">-//50:N5/:0559-N</a>                | switcher                         |
| <a href="#">-//M0SE5292</a>                     | special switch                   |
| <a href="#">-//M0:1°N/°</a>                     | Tockenschalter                   |
| <a href="#">I//50SE1925</a>                     | Tockenschalter                   |
| <a href="#">I//50/95:20/N3-N</a>                | switch                           |
| <a href="#">I7N:0//C0Hed0/958AZ</a>             | Gndicator 7ight                  |
| <a href="#">I7N:0//C0Yreen0/958AZ</a>           | Gndicator 7ight                  |
| <a href="#">I7N:0//C0Fellow0/958AZ</a>          | Gndicator light Fellow /958 AZ   |
| <a href="#">I7N:0N:C Cia.N:mm Hed /958AZ</a>    | Gndicator light Hed /958 AZ      |
| <a href="#">I7N:0N:C Cia.N:mm Yreen /958AZ</a>  | Gndicator light Yreen /958 AZ    |
| <a href="#">I7N:0N:C Cia.N:mm Fellow /958AZ</a> | Gndicator light Fellow /958 AZ   |
| <a href="#">FA/5/5</a>                          | grabit eUtractor set             |
| <a href="#">S:5:0:N5/20559-N</a>                | Tockenschalter                   |
| <a href="#">-//50:N9N30559-N</a>                | Tockenschalter                   |
| <a href="#">P1N/01N9550A5/</a>                  | Cisconnect switches              |

























| Product                                                   | Description                                          |
|-----------------------------------------------------------|------------------------------------------------------|
| <a href="#">Art.No. 18400, Type: SP-4001-101- 003-003</a> | Sensor-Potentiometer, Automotive Version             |
| <a href="#">Art.No. 18501, Type: SP-5001-104-002-002</a>  | Sensor-Potentiometer (Automotive Version)            |
| <a href="#">Art.No. 18504, Type: SP-5001-114-005-001</a>  | Sensor-Potentiometer (Automotive Version)            |
| <a href="#">Art.No. 65111, Type: PRS 25 A 502</a>         | Rotative Widerstandselemente                         |
| <a href="#">Art.No. 65114, Type: PRS 45 A 502</a>         | Rotative Widerstandselemente                         |
| <a href="#">Art.No. 65115, Type: PRS 65 A 502</a>         | Rotative Widerstandselemente                         |
| <a href="#">Art.No. 70137, Type: S-094</a>                | Schleifergarnituren für rotative Widerstandselemente |
| <a href="#">Art.No. 70138, Type: S-098</a>                | Schleifergarnituren für rotative Widerstandselemente |
| <a href="#">Art.No. 70139, Type: S-152</a>                | Schleifergarnituren für rotative Widerstandselemente |
| <a href="#">Art.No. 5614, Type: EEM-33-76</a>             | Anschlussstechnik M16x0,75 (IEC130-9) für Baureihe   |
| <a href="#">Art.No. 5615, Type: EEM-33-77</a>             | Anschlussstechnik M16x0,75 (IEC130-9) für Baureihe   |
| <a href="#">Art.No. 5621, Type: EEM-33-78</a>             | Anschlussstechnik M16x0,75 (IEC130-9) für Baureihe   |
| <a href="#">Art.No. 5622, Type: EEM-33-79</a>             | Anschlussstechnik M16x0,75 (IEC130-9) für Baureihe   |
| <a href="#">p/n: 5623, Type: EEM-33-80</a>                | coupler                                              |
| <a href="#">Art.No. 5687, Type: Z-103-G03</a>             | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 5690, Type: Z-104-G06</a>             | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 400103910 , Type: Z-106-G-6</a>       | Shaft coupling                                       |
| <a href="#">Art.No. 103912, Type: Z-106-G-6.35</a>        | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 103913, Type: Z-106-G-10</a>          | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 5692, Type: Z-110-G10</a>             | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 59013, Type: ZK1-500</a>              | Wellen- und Gabelkupplungen für Baureihe             |
| <a href="#">Art.No. 54220, Type: MUP-080-111</a>          | Signalverarbeitung, Messumformer                     |
| <a href="#">400054221 / MUP-080-113</a>                   | signal processing, transmitter                       |
| <a href="#">400054202 / MUP-400-11</a>                    | Signal processing, transmitter                       |
| <a href="#">400054101 / MUW-200-0</a>                     | Transducer for potentiometer                         |
| <a href="#">Art.No. 54102, Type: MUW-200-1</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54103, Type: MUW-200-4</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54151, Type: MUW-250-0</a>            | Transducer for potentiometer                         |
| <a href="#">P/N: 400054152 Type: MUW-250-1</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54001, Type: MUP-100-0</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">P/N: 054002 Type: MUP-100-1</a>               |                                                      |
| <a href="#">p/n: 400054010, Type: MUP-110-0</a>           | Measured value transducers for potentiometers        |
| <a href="#">400054011 / MUP-110-1</a>                     | Measurement value converter for potentiometers       |
| <a href="#">Art.No. 54014, Type: MUP-110-4</a>            | Measuring transducer for potentiometers              |
| <a href="#">Art.No. 54051, Type: MUP-150-5</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54052, Type: MUP-150-6</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54060, Type: MUP-160-0</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">400054061 / MUP-160-1</a>                     | Transducer for potentiometer                         |
| <a href="#">Art.No. 54064, Type: MUP-160-4</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54171, Type: MUK-350-0</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 54172, Type: MUK-350-1</a>            | Messwertumformer für Potentiometer                   |
| <a href="#">P/N: 400054173, Type: MUK-350-4</a>           | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 400054174, Type: MUK-350-6</a>        | Messwertumformer für Potentiometer                   |
| <a href="#">Art.No. 025304, Type: TLH-0100</a>            | Displacement sensor without push rod                 |
| <a href="#">TH1-0250-102-423-101</a>                      | Measurement converter signal converter               |

| Product                                                    | Description                                    |
|------------------------------------------------------------|------------------------------------------------|
| <a href="#">P/N: 025385 Type: TLH-3000</a>                 | Wegaufnehmer                                   |
| <a href="#">P/N: 400005655 Type: Z-TLM-P05</a>             | POSITIONSGEBER                                 |
| <a href="#">P/N: 026168 Type: LWX-0500-001</a>             | Position Transducer                            |
| <a href="#">4000370HX</a>                                  |                                                |
| <a href="#">P/N: 025330 Type: TLH-0750</a>                 |                                                |
| <a href="#">P/N: 400024520, Type: LWH-0500</a>             | Transducer                                     |
| <a href="#">P/N: 010001 Type: IP-6501-A502</a>             |                                                |
| <a href="#">P/N: 400024509, Type: LWH-0225</a>             | Displacement sensor                            |
| <a href="#">RSM 2832-010-111-206</a>                       |                                                |
| <a href="#">TRS 75 A 502</a>                               | Position Transducer Potentiometer              |
| <a href="#">P/N: 025305 Type: TLH-0130</a>                 | Position Transducers                           |
| <a href="#">RSC-2801-606-112-201</a>                       | Angle sensor                                   |
| <a href="#">P/N: 400037109, Type: TX2-0250-716-002-101</a> | displacement transducer                        |
| <a href="#">400054003</a>                                  | transducer                                     |
| <a href="#">P/N: 024306 Type: LWH-0150</a>                 | Position Transducer                            |
| <a href="#">400054051 / MUP-150-5</a>                      |                                                |
| <a href="#">P/N: 400019544, Type: SP-2841-130-050-003</a>  | Sensor potentiometer                           |
| <a href="#">RSC-2831-612-211-201</a>                       | WINKELSENSOR,KONTAKTLOS                        |
| <a href="#">P/N: 054171 Type: MUK-350-0</a>                |                                                |
| <a href="#">TRS-0050 (alt number TRS 50 A 502)</a>         | Position encoder                               |
| <a href="#">P/N: 024312 Type: LWH-0300</a>                 |                                                |
| <a href="#">400005679 / Z301-M6/M4</a>                     | ball couplings, ball joint head, touch roller  |
| <a href="#">P/N: 023262 Type: TR-0050</a>                  | Voltage divider                                |
| <a href="#">Nr: 054051 Type: MUP-150-5</a>                 | Signal Conditioner                             |
| <a href="#">P/N: 024304 Type: LWH-0100</a>                 | Displacement sensor                            |
| <a href="#">P/N: 023267 Type: TR-0050-.05</a>              |                                                |
| <a href="#">P/N: 023277 Type: TRS-0050-.05</a>             |                                                |
| <a href="#">P/N: 026114 Type: LWG-0360</a>                 | Displacement sensor with push rod and rod ends |
| <a href="#">P/N: 005634 Type: EEM-33-89</a>                | connector                                      |
| <a href="#">LWH360 #024314</a>                             | Position Transducer                            |
| <a href="#">TP1-0500-101-411-101</a>                       | Transducer                                     |
| <a href="#">P/N: 025318 Type: TLH-0450</a>                 | Wegaufnehmer ohne Schubstange                  |
| <a href="#">deleted product</a>                            | Potentiometer                                  |
| <a href="#">TP1 100 101 411 101</a>                        | Contactless Linear Ruler                       |
| <a href="#">P/N: 025304 Type: TLH-0100</a>                 | Transducer                                     |
| <a href="#">Type: MUP-110-4</a>                            |                                                |
| <a href="#">RFC-4801-636-111-501</a>                       |                                                |
| <a href="#">P/N: 005611 Type: EEM-33-70</a>                |                                                |
| <a href="#">P/N: 400024318 Type: LWH-0450</a>              | WEGAUFNEHMER                                   |
| <a href="#">P/N: 400025305 Type: TLH-0130</a>              | Linear Potentiometer Position Sensor           |
| <a href="#">RFC-4801-636-121-501</a>                       |                                                |
| <a href="#">P/N: 400058100 Type: Z-G60</a>                 |                                                |
| <a href="#">Typ: TLH 360</a>                               |                                                |
| <a href="#">Type: LWH-0100 P/N:024304</a>                  |                                                |
| <a href="#">400024536 / LWH-0900</a>                       | Position Transducer                            |

| Product                                                   | Description                                                                |
|-----------------------------------------------------------|----------------------------------------------------------------------------|
| <a href="#">P/N: 400001041 Type: IPE-6501-S0056</a>       | Potentiometer                                                              |
| <a href="#">TH1-0800-102-423-101</a>                      |                                                                            |
| <a href="#">400023235 / TS-0100</a>                       | Displacement sensor                                                        |
| <a href="#">400005612 / EEM-33-71</a>                     | connection technology                                                      |
| <a href="#">P/N: 400024504 Type: LWH-0100</a>             | displacement transducer                                                    |
| <a href="#">400026124 / LWG-0600</a>                      | Transducer                                                                 |
| <a href="#">400024524 / LWH-0600</a>                      | Position Transducer                                                        |
| <a href="#">400024326 / LWH-0650</a>                      |                                                                            |
| <a href="#">P/N: 400019521, Type: SP-2831-308-000-001</a> | Sensor- potentiometer                                                      |
| <a href="#">400024516 / LWH-0400</a>                      | Position Transducer                                                        |
| <a href="#">400024316 / LWH-0400</a>                      | Linear sensor                                                              |
| <a href="#">P/N: 025383 Type: TLH-2500</a>                |                                                                            |
| <a href="#">P/N: 025309 Type: TLH-0225</a>                | WEGAUFNEHMER                                                               |
| <a href="#">P/N: 400006201 Type: P-4501-A102</a>          | Rotary Sensor                                                              |
| <a href="#">LS1-0025-002-421-101</a>                      | NOVOPAD Position Transducer with return spring up to 100 mm non-contacting |
| <a href="#">P/N: RFC-4801-636-111-201</a>                 |                                                                            |
| <a href="#">TP1-0250-101-423-205</a>                      |                                                                            |
| <a href="#">P/N: 400024514, Type: LWH-0360</a>            | Transducer                                                                 |
| <a href="#">P/N: 400019527 Type: SP-2831-100-002-001</a>  |                                                                            |
| <a href="#">TP1-0600-101-212-101</a>                      |                                                                            |
| <a href="#">TP1-0300-101-212-101</a>                      |                                                                            |
| <a href="#">TP1-0100-101-212-101</a>                      |                                                                            |
| <a href="#">P/N: 005698 Type: Z-TH1-P19</a>               |                                                                            |
| <a href="#">P/N: 400003201 Type: P-2501-A102</a>          |                                                                            |
| <a href="#">P4504-S0060-2K / 54000019</a>                 | potentiometer                                                              |
| <a href="#">IP-6501-A502.025</a>                          |                                                                            |
| <a href="#">400005611 / EEM 33-70</a>                     | connection technology                                                      |
| <a href="#">PTP-0200-444-901-301</a>                      |                                                                            |
| <a href="#">PTP-0075-444-901-301</a>                      |                                                                            |
| <a href="#">400023263 / TR-0075</a>                       | Position Transducer with return spring potentiometric                      |
| <a href="#">400025350 / TLH-1250</a>                      | Position Transducer                                                        |
| <a href="#">P/N: 023206 Type: T-0150</a>                  |                                                                            |
| <a href="#">P/N: 400024336 Type: LWH-0900</a>             |                                                                            |
| <a href="#">P/N: 026102 Type: LWG-0050</a>                |                                                                            |
| <a href="#">400026104 / LWG-0100</a>                      | Sensor                                                                     |
| <a href="#">Z-TLM-P05</a>                                 |                                                                            |
| <a href="#">P/N: 024302 Type: LWH-0050</a>                | Potentiometric Linear Ruler                                                |
| <a href="#">400025324 / TLH-0600</a>                      | Encoder                                                                    |
| <a href="#">4000350FT / TP1-0300-101-411-102</a>          |                                                                            |
| <a href="#">54000005</a>                                  | Potentiometer                                                              |
| <a href="#">P/N: 019564 Type: SP-2841-345-065-001</a>     |                                                                            |
| <a href="#">MUP 400-11 / 054202</a>                       | Signalverarbeitung, Messumformer                                           |
| <a href="#">024314, LWH-0360</a>                          | transducer                                                                 |
| <a href="#">P/N: 0550 Type: LWH-0550</a>                  |                                                                            |

| Product                                                   | Description                        |
|-----------------------------------------------------------|------------------------------------|
| <a href="#">TP1-1000-101-411-205</a>                      | WEGAUFNEHMER                       |
| <a href="#">54000005 / P6530s0001</a>                     | Potentiometer                      |
| <a href="#">P/N: 026160 Type: LWX-0300-001</a>            | transducer                         |
| <a href="#">P/N: 026162 Type: LWX-0360-001</a>            |                                    |
| <a href="#">P/N: 026168 Type: LWX-0500-005</a>            |                                    |
| <a href="#">P/N: 400026312 Type: LWX-0300-003-101</a>     | Transducer                         |
| <a href="#">P/N: 400026314, Type: LWX-0360-003-101</a>    | Position transducer                |
| <a href="#">P/N: 400026320 Type: LWX-0500-003-101</a>     | Transducer                         |
| <a href="#">P/N: 400005601, Type: EEM 33-33</a>           | connector                          |
| <a href="#">P/N: 400005610 Type: EEM 33-63</a>            |                                    |
| <a href="#">P/N: 400005634 Type: EEM 33-89</a>            |                                    |
| <a href="#">P/N: 40003500K Type: TP1-0200-101-423-102</a> | VZTYP WEGAUFNEHMER                 |
| <a href="#">P/N: 400005651 Type: Z-TLM-P01</a>            | POS-GEBER                          |
| <a href="#">P/N: 400005630 Type: EEM 33-87</a>            | W-DOSE                             |
| <a href="#">p/n: 400005697 type: Z-TH1-P18</a>            | ring                               |
| <a href="#">P/N: 400008201 Type: P-6501-A102</a>          |                                    |
| <a href="#">P/N: 002003 Type: P-2201-A502</a>             |                                    |
| <a href="#">TP1-0650-101-423-101</a>                      |                                    |
| <a href="#">P/N: 024310 Type: LWH-0250</a>                | potentiometer                      |
| <a href="#">P/N: 400024522, Type: LWH-0550</a>            | Transducer                         |
| <a href="#">P/N: 400026112, Type: LWG-0300</a>            | Displacement transducer            |
| <a href="#">P/N: 400025318 Type: TLH-0450</a>             |                                    |
| <a href="#">RFC-4801-609-111-201</a>                      | Rotary sensor                      |
| <a href="#">P/N: 400026172 Type: LWX-0600-001</a>         | transducer                         |
| <a href="#">54000019 (P4504-S0060)</a>                    | Potentiometer                      |
| <a href="#">P/N: 400008224 Type: P-6501-S0049</a>         | sensor                             |
| <a href="#">TH1-0500-102-423-102</a>                      | Transducer                         |
| <a href="#">P/N: 400005698 Type: Z-TH1 P19</a>            | Ring                               |
| <a href="#">EEM33-90</a>                                  | Cable with straight connector, 5 m |
| <a href="#">P6512a502</a>                                 |                                    |
| <a href="#">P/N: 400025350 Type: TLH-1250</a>             |                                    |
| <a href="#">400006209 / P-4502-A502</a>                   | RUNDPOTENTIOMETER                  |
| <a href="#">TH1-0800-102-423-102</a>                      | Displacement sensor                |
| <a href="#">P/N: 400010001 Type: IP-6501-A502</a>         | Potentiometer                      |
| <a href="#">400019521 / SP-2831-308-000-001</a>           | SENSOR-POTENTIOMETER               |
| <a href="#">RFD-4001-636-221-401</a>                      | angle sensor                       |
| <a href="#">400019542</a>                                 |                                    |
| <a href="#">EEM33-91</a>                                  | Cable                              |
| <a href="#">4000350BN</a>                                 | Transducer                         |
| <a href="#">P/N: 400023234 Type: TS-0075</a>              |                                    |
| <a href="#">400019560 / SP-2846-345-065-101</a>           | Sensor potentionmeter              |
| <a href="#">P/N: 400024309 Type: LWH-0225</a>             | Potentiometer line                 |
| <a href="#">TEX-0050-415-002-101</a>                      |                                    |
| <a href="#">P/N: 400026283 Type: LWX-0150-002-201</a>     | Position Transducers               |
| <a href="#">THL-0225</a>                                  |                                    |

| Product                                                 | Description                                |
|---------------------------------------------------------|--------------------------------------------|
| <a href="#">P/N: 400023232, Type: TS-0025</a>           | Position Transducer, potentiometric        |
| <a href="#">RFC-4853-636-121-202</a>                    |                                            |
| <a href="#">400005659 / Z-RFC-P04</a>                   | position sensor                            |
| <a href="#">P/N: 400054052 Type: MUP150-6</a>           |                                            |
| <a href="#">RFC-4853-611-121-202</a>                    | WINKELSENSOR                               |
| <a href="#">TH1-0775-102-423-102</a>                    |                                            |
| <a href="#">TP1-0900-101-211-102</a>                    | Position encoder                           |
| <a href="#">P/N: 400006102, Type: LWG-0050</a>          | Displacement sensor                        |
| <a href="#">TP1-0850-101-411-102</a>                    |                                            |
| <a href="#">TP1-0250-101-411-102</a>                    |                                            |
| <a href="#">RFC 4801-609-112-201</a>                    | sensor                                     |
| <a href="#">P/N: 400009121 Type: IGP-03-P-6501-A502</a> | potentiometer                              |
| <a href="#">RFC-4853-609-112-202</a>                    | Contactless-Sensor                         |
| <a href="#">400009121</a>                               | geared potentiometer                       |
| <a href="#">P/N: 400023271 Type: TRS-0025</a>           |                                            |
| <a href="#">400024512 / LWH-0300</a>                    | Transducer                                 |
| <a href="#">P/N: 400005613 Type: EEM-33-72</a>          | Connector                                  |
| <a href="#">P/N: 400054172 Type: MUK-350-1</a>          |                                            |
| <a href="#">TEX 150-415-002-101</a>                     | position transducer                        |
| <a href="#">TP1-2000-101-411-101</a>                    | Magnetostrictive Position Ruler            |
| <a href="#">TP1-2000-101-411-205</a>                    | Magnetostrictive Position Ruler            |
| <a href="#">P/N: 400005627 Type: EEM-33-84</a>          |                                            |
| <a href="#">402610515</a>                               | adaptor                                    |
| <a href="#">TH1-0450-102-423-102</a>                    | Linier position encoder                    |
| <a href="#">TH1-3250-102-423-102</a>                    | SENSOR                                     |
| <a href="#">RSM-2832-006-121-501</a>                    | Sensor                                     |
| <a href="#">TP1-0125-101-215-205</a>                    | Transducer                                 |
| <a href="#">P/N: 400023260, Type: TR-0010</a>           | Position Transducer                        |
| <a href="#">P/N: 400023269 Type: TR-0100-.05</a>        | Transducer                                 |
| <a href="#">RSC-2831-636-121-201</a>                    | Sensor                                     |
| <a href="#">TEX-0200-415-002-202</a>                    |                                            |
| <a href="#">T 50</a>                                    | Linear Position Sensor                     |
| <a href="#">RSC -2801-620-111-206 (400020AAD)</a>       | encoder                                    |
| <a href="#">P/N: 400053102, Type: FTI-10-2.67-4-K1</a>  | Contactless, inductive position transducer |
| <a href="#">P/N: 400023261 Type: TR-0025</a>            | displacement transducer                    |
| <a href="#">P/N: 400054151 Type: MUW-250-0</a>          | Converter                                  |
| <a href="#">400005661 / Z-RFC-P02</a>                   | Position Marker                            |
| <a href="#">P/N: 400024508, Type: LWH-0200</a>          | Position transducer with push rod          |
| <a href="#">TX2-0050-904-002-403-4</a>                  |                                            |
| <a href="#">TP1-1500-101-411-102</a>                    | Transducer                                 |
| <a href="#">RFC-4801-606-111-202</a>                    | Sensor                                     |
| <a href="#">TP1-0600-101-423-205</a>                    | Linear ruler                               |
| <a href="#">P/N: 400010018 Type: IP-6501-4007</a>       | Potentiometer                              |
| <a href="#">TH1-0500-102-423-101</a>                    | Transducer                                 |
| <a href="#">TH1-0150-102-423-101</a>                    | Transducer                                 |

| Product                                                  | Description                             |
|----------------------------------------------------------|-----------------------------------------|
| <a href="#">TEX-0025-421-002-101</a>                     | Position Transducer                     |
| <a href="#">P/N: 400002227 Type: P-2201-S0076</a>        | potentiometer                           |
| <a href="#">P/N: 400009112, Type: GP-05-P-6501-A502</a>  | Gear potentiometer                      |
| <a href="#">P/N: 400024512, Type: LWH-300</a>            | sensor                                  |
| <a href="#">TP1-1000-101-411-101</a>                     | Transducer                              |
| <a href="#">P/N: 400003203 Type: P-2501-A502</a>         | Potentiometer                           |
| <a href="#">P/N: 400008202 Type: P-6501-A202</a>         | potentiometer                           |
| <a href="#">RSC-2831-610-111-201</a>                     | angle sensor                            |
| <a href="#">TP1-0050-101-411-101</a>                     |                                         |
| <a href="#">400054172 / MUK-350-1</a>                    | POSITION AMPLIFIER                      |
| <a href="#">P/N: 400019540 Type: SP-2821-308-000-001</a> | sensor-potentiometer                    |
| <a href="#">TP1-0600-101-423-101</a>                     | displacement transducer                 |
| <a href="#">400024515 / LWH-0375</a>                     | Position transducer                     |
| <a href="#">TP1-1600-101-423-101</a>                     | Magnetostrictive Position Table         |
| <a href="#">P/N: 400010004 Type: IP-6501-G252</a>        | potentiometer                           |
| <a href="#">RFC 4801-605-111-201</a>                     | Angle sensor                            |
| <a href="#">P/N: 400056126 Type: EEM-33-26</a>           | connector                               |
| <a href="#">P-6501-A502 (400008203)</a>                  | RUNDPOTENTIOMETER                       |
| <a href="#">Type: IP-6501-A502</a>                       |                                         |
| <a href="#">TEX-0050-411-002-101</a>                     | Displacement transducer, potentiometric |
| <a href="#">P/N: 400025330 Type: TLH-0750</a>            | transducer                              |
| <a href="#">TE1-0025-101-411-202</a>                     | Potentiometric displacement transducers |
| <a href="#">TE1-0050-101-411-202</a>                     |                                         |
| <a href="#">P/N: 400026114 Type: LWG-0360</a>            |                                         |
| <a href="#">400023273 / TRS-0075</a>                     | Transducer                              |
| <a href="#">400023202 Typ T-0025</a>                     | TRANSDUCER                              |
| <a href="#">RSC 2832-636-111-202</a>                     | Service                                 |
| <a href="#">LS1-0200-001-421-101</a>                     | Position Transducer                     |
| <a href="#">P/N: 400025344, Type: TLH 1100</a>           |                                         |
| <a href="#">TEX-0025-418-002-101</a>                     | displacement transducer up to 300 mm    |
| <a href="#">TEX-050-615-002-101 oem</a>                  | linear potentiometer                    |
| <a href="#">400023264 / TR-0100</a>                      | Position Transducer                     |
| <a href="#">P/N: 400025309 Type: TLH-0225</a>            | Position transducer without push rod    |
| <a href="#">TH1 0650 102 411 102</a>                     |                                         |
| <a href="#">TH1 1300 102 411 102</a>                     |                                         |
| <a href="#">RSM-2841-016-111-202</a>                     | angle sensor                            |
| <a href="#">TH1-0150-102-423-102</a>                     | Position sensor                         |
| <a href="#">TR-0025 (400023261)</a>                      | WEGTASTER                               |
| <a href="#">400024314 / LWH-0360</a>                     | Position Transducer                     |
| <a href="#">P/N: 400026130 Type: LWG-0750</a>            | Displacement sensor                     |
| <a href="#">Art.Nr. 402517875</a>                        | cutter                                  |
| <a href="#">P/N: 400024324 Type: LWH-0600</a>            | linear potentiometer                    |
| <a href="#">P/N: 400025336 Type: TLH-0900</a>            | Position Transducer                     |
| <a href="#">P/N: 400025320 Type: TLH-0500</a>            | Linear Potentiometer                    |
| <a href="#">P/N: 400025314 Type: TLH-0360</a>            | Position Transducer                     |

| Product                                                   | Description                                  |
|-----------------------------------------------------------|----------------------------------------------|
| <a href="#">400026120 / LWG-0500</a>                      | Transducer                                   |
| <a href="#">P/N: 400010065 Type: IPS-6502-A502</a>        |                                              |
| <a href="#">P/N: 400005690 Type: Z-104-G-06</a>           |                                              |
| <a href="#">P/N: 400037102 Type: TX2-0050-716-002-101</a> | potentiometer                                |
| <a href="#">TP1-0600-101-411-101</a>                      |                                              |
| <a href="#">P/N: 400019541 Type: SP-2841-308-000-001</a>  | sensor potentiometer                         |
| <a href="#">P/N: 400024505, Type: LWH-0130</a>            | Position Transducers                         |
| <a href="#">P/N: 400024303 Type: LWH-0075</a>             | displacement transducer                      |
| <a href="#">P/N: 400025306 Type: TLH-0150</a>             | DISPLACEMENT TRANSDUCER                      |
| <a href="#">RSC-2800-610-112-201</a>                      | Angle sensor                                 |
| <a href="#">P/N: 400025304, Type: TLH-0100</a>            | The ruler                                    |
| <a href="#">LS1-0025-001-423-101</a>                      | Analog Interface With Connector              |
| <a href="#">RSC-2841-636-111-202</a>                      | Rotary Sensor                                |
| <a href="#">RFC-4853-636-321-252</a>                      | Rotary Sensor touchless technology           |
| <a href="#">P/N: 400019542 Type: SP-2841-100-002-001</a>  | sensor potentiometer                         |
| <a href="#">TH1-0350-102-423-102</a>                      |                                              |
| <a href="#">RSM-2841-002-211-202</a>                      | Sensor                                       |
| <a href="#">TEX 0025-415-002-101</a>                      | Displacement transducer, potentiometric      |
| <a href="#">400023233 / TS-0050</a>                       | Displacement transducer                      |
| <a href="#">400025330 / TLH-0750</a>                      | DISPOSABLE TRANSDUCER                        |
| <a href="#">RSC-2832-605-121-202</a>                      | sensor                                       |
| <a href="#">P/N: 400025307 Type: TLH-0175</a>             | sensor                                       |
| <a href="#">400025314 / TLH-0360</a>                      | sensor                                       |
| <a href="#">400025321 / TLH-0525</a>                      | sensor                                       |
| <a href="#">P/N: 400024314 Type: LWH-0360</a>             | travel sensor                                |
| <a href="#">RSC-2801-603-112-201</a>                      | Rotary Sensor                                |
| <a href="#">RSC 2831-609-121-201</a>                      | angle sensor                                 |
| <a href="#">400023274 / TRS-0100</a>                      | Position Transducer                          |
| <a href="#">TP1-0400-101-423-205</a>                      | LINEAR RULER                                 |
| <a href="#">T-0075</a>                                    | linear transducer                            |
| <a href="#">TEX-0100-413-002-202</a>                      | position sensor, potentiometric              |
| <a href="#">TE1-0025-102-411-202</a>                      |                                              |
| <a href="#">TP1-1500-101-411-205</a>                      |                                              |
| <a href="#">400025311 / THL-0275</a>                      | Sensor                                       |
| <a href="#">400023204 / T-0075</a>                        |                                              |
| <a href="#">400023205 / T-0100</a>                        | Displacement sensor with continuous push rod |
| <a href="#">P/N 400026507 Type: LWX-0175-004-101</a>      | Transducer                                   |
| <a href="#">400009112 / GP-05-P-6501-A502</a>             | Transmission potentiometer                   |
| <a href="#">400010018 / IP-6501-4007</a>                  | Industrial potentiometer                     |
| <a href="#">400026330 / LWX-0750-003-101</a>              | Potentiometric displacement sensors          |
| <a href="#">400005634 / EEM 33-89</a>                     | Position Transducer                          |
| <a href="#">400026178 / LWX-0750-001</a>                  | Potentiometric displacement sensors          |
| <a href="#">P/N: 400025370, Type: TLH-1750</a>            | Linear Position Transducer                   |
| <a href="#">Typ: LWG 150, Art.Nr.: 002461</a>             |                                              |
| <a href="#">TEX-0150-411-002-101</a>                      | Position Transducer                          |

| Product                                              | Description                                      |
|------------------------------------------------------|--------------------------------------------------|
| <a href="#">TH1 1600 102 411 205</a>                 |                                                  |
| <a href="#">ML25-10K0 125MB #82445</a>               |                                                  |
| <a href="#">400003264 / P-2501-240-386-001</a>       | Rotary Sensor Multiple Section Potentiometer     |
| <a href="#">400024318 / LWH-0450</a>                 | displacement transducer                          |
| <a href="#">p/n: 025324; Type: TLH-0600</a>          | Displacement transducer without push rod         |
| <a href="#">400025316 / TLH-0400</a>                 |                                                  |
| <a href="#">RSM-2832-010-111-202</a>                 | Angle Sensors                                    |
| <a href="#">LS1-0025-002-411-202</a>                 | Sensor                                           |
| <a href="#">RFC-4801-607-112-501</a>                 | Rotary Sensor                                    |
| <a href="#">400056070 / Z-RFC-P08</a>                | positioner                                       |
| <a href="#">400023261 / TR-0025</a>                  | Transducer to 100 mm with continuous sliding rod |
| <a href="#">RSC-2802-612-121-201</a>                 |                                                  |
| <a href="#">RFD-4021-636-211-401 (400039DA4)</a>     | VZTYP ANGLE SENSOR                               |
| <a href="#">400011021 / AW-360-ZE-10</a>             |                                                  |
| <a href="#">4000350HC</a>                            | Transducer                                       |
| <a href="#">4000350BZ</a>                            | Transducer                                       |
| <a href="#">4000350C3</a>                            | Transducer                                       |
| <a href="#">400026114 / LWG-0360</a>                 | linear potentiometer                             |
| <a href="#">TP1-0450-101-411-205</a>                 |                                                  |
| <a href="#">RFD 4021-636-211-401</a>                 | sensor                                           |
| <a href="#">RFC-4801-606-111-201</a>                 | sensor                                           |
| <a href="#">RFC-4853-606-111-201</a>                 |                                                  |
| <a href="#">TP1-0200-101-411-103</a>                 |                                                  |
| <a href="#">LWH-0300</a>                             | DISPLACEMENT TRANSDUCER                          |
| <a href="#">400106229, RFC-4853-618-121-206</a>      | angle sensor                                     |
| <a href="#">TEX 0075-411-002-101</a>                 | Position Transducer                              |
| <a href="#">400054220 / MUP-080-111</a>              | transducer                                       |
| <a href="#">RSM-2841-002-213-202</a>                 | Angle sensor                                     |
| <a href="#">400019542 / SP-2841-100-002-001</a>      | Angular Potentiometer Position Sensor            |
| <a href="#">RSM-2841-003-111-206</a>                 | Plug-in coupling                                 |
| <a href="#">TEX-0100-415-002-202</a>                 | Position Transducer                              |
| <a href="#">400054201 / MUP-400-01</a>               | interface module                                 |
| <a href="#">TP1-0100-101-423-101</a>                 | LINEER RULER                                     |
| <a href="#">TP1-0050-101-423-102</a>                 | Transducer                                       |
| <a href="#">p/n: 400056059; Type: Z-TP1-S01-0450</a> | Push Rod                                         |
| <a href="#">p/n: 400024322; Type: LWH-0550</a>       | Transducer with push rod                         |
| <a href="#">RSC-2831-636-111-201</a>                 | ROTARY POSITION SENSOR                           |
| <a href="#">MUK-350</a>                              | transducer                                       |
| <a href="#">TP1-0500-101-411-102</a>                 | Potentiometer                                    |
| <a href="#">400005694 / Z-TP1-P07</a>                | Positioners                                      |
| <a href="#">400005635 / EEM-33-90</a>                | Connection system M12x1 for series               |
| <a href="#">RSC-2801-714-213-201</a>                 | ANGLE SENSOR                                     |
| <a href="#">TP1 1000 101 841 205</a>                 | transducer,                                      |
| <a href="#">TP1 0250 101 841 102</a>                 | Transducer                                       |
| <a href="#">400053102 / FTI-10-2.67-4-K1</a>         | Pathbutton                                       |

| Product                                           | Description                                                 |
|---------------------------------------------------|-------------------------------------------------------------|
| <a href="#">P4519 S0060 F.N.R. : 070971/ 0186</a> | Potentiometer                                               |
| <a href="#">TEX-0150-415-002-202</a>              | ENCODED                                                     |
| <a href="#">024309 LWH-0225</a>                   | Potentiometric Sensor                                       |
| <a href="#">RFC-4853-636-211-401</a>              | VZTYP ANGLE SENSOR                                          |
| <a href="#">RFC-4801-609-321-256</a>              |                                                             |
| <a href="#">40005401x / MUP-110</a>               |                                                             |
| <a href="#">TH1-1400-102-423-101</a>              | Position Transducer                                         |
| <a href="#">TH1 1150 102 423 102</a>              |                                                             |
| <a href="#">Type: EEM-33-71, P/N: 400005612</a>   | Connection technology M16x0.75 (IEC130-9) for TS/TRS series |
| <a href="#">RSC 2831-610-121-201</a>              | angle sensor                                                |
| <a href="#">TP1-1800-101-423-101</a>              |                                                             |
| <a href="#">400025340 / TLH-1000</a>              | linear sensor                                               |
| <a href="#">p/n: 023202, Type: T-0025</a>         | displacement transducer                                     |
| <a href="#">400105988 / RFC-4853-636-111-501</a>  | angle sensor                                                |
| <a href="#">400019532</a>                         | SENSOR POTENTIOMETER                                        |
| <a href="#">TP1-1400-101-841-102</a>              | DISPLACEMENT TRANSDUCER                                     |
| <a href="#">400054103 / MUW-200-4</a>             | plug type                                                   |
| <a href="#">400009122 / IGP-05-P-6501-A502</a>    |                                                             |
| <a href="#">RSB-3607-636-111-FM4</a>              |                                                             |
| <a href="#">Art.No. 10018, Type: IP-6501-4007</a> | Industrial potentiometer                                    |
| <a href="#">LWG-0130, 400104722</a>               | Linear potentiometer                                        |
| <a href="#">400006205 / P-4501-A103</a>           | rotary sensor potentmeter                                   |
| <a href="#">400107045 / TRS-0025-101</a>          |                                                             |
| <a href="#">TEX-0025-428-002-302</a>              |                                                             |
| <a href="#">TP1-0900-101-411-205</a>              |                                                             |
| <a href="#">RFC-4853-636-121-501</a>              | angle sensor                                                |
| <a href="#">TEX-0250-415-002-202</a>              |                                                             |
| <a href="#">TH1-0500-102-411-203</a>              | Position Transducer                                         |
| <a href="#">400024361 / LWH-0350</a>              |                                                             |
| <a href="#">4000370KB</a>                         |                                                             |
| <a href="#">TE1-0025-101-422-202</a>              |                                                             |
| <a href="#">RSC2831-636-111-202</a>               | Rotary Sensor                                               |
| <a href="#">RSM-2821-006-111-220</a>              | Multiturn Sensor                                            |
| <a href="#">P/N: 400005691, Type: Z-105-G-06</a>  | fork coupling Ø 6 mm, backlash free                         |
| <a href="#">400005666 \ EEM-33-34</a>             | MQS plug kit including contacts, seals                      |
| <a href="#">RSX-7911-636-321-252</a>              | Rotary Sensor                                               |
| <a href="#">RSX-7911-836-324-651</a>              | rotary sensor                                               |
| <a href="#">P/N: 400023206, Type T-0150</a>       | Short Stroke Transducer                                     |
| <a href="#">04229629600</a>                       | potentiometer                                               |
| <a href="#">400002203 / P-2201-A502</a>           |                                                             |
| <a href="#">RSC 2832-636-121-202</a>              |                                                             |
| <a href="#">RSC-2831-609-111-201</a>              |                                                             |
| <a href="#">RSC-2831-618-121-201</a>              |                                                             |
| <a href="#">RFC-4801-618 -111-206</a>             | Encoder                                                     |
| <a href="#">TH1-0600-102-211-101</a>              |                                                             |

| Product                                                    | Description             |
|------------------------------------------------------------|-------------------------|
| <a href="#">4000370MU \ TEX-0150-415-002-101</a>           |                         |
| <a href="#">TP1-0800-101-A12-107</a>                       |                         |
| <a href="#">TP1-0200-101-A12-107</a>                       |                         |
| <a href="#">400024510 / LWH-0250</a>                       | Transducer              |
| <a href="#">TEX-0300-415-002-101</a>                       | Position Transducer     |
| <a href="#">RFC-4853-609-111-201</a>                       | angle-sensor            |
| <a href="#">400059010 / Z-FTI-B01</a>                      | mounting clamp          |
| <a href="#">RSC 2831 736 223 201</a>                       | Rotary Sensor           |
| <a href="#">RFC-4801-609-111-206</a>                       |                         |
| <a href="#">TP1-1500-101-211-102</a>                       |                         |
| <a href="#">TH1-1300-102-423-102</a>                       | displacement transducer |
| <a href="#">TEX-0150-411-002-202</a>                       | transducer              |
| <a href="#">RFC-4853-603-121-501</a>                       | ANGLE-SENSOR            |
| <a href="#">RSC-2801-636-111-201</a>                       | angle sensor            |
| <a href="#">P/N: 400005303, Type: F-205-G</a>              | Position Transducer     |
| <a href="#">LWH-750</a>                                    | TRANSDUCER              |
| <a href="#">TP1-0325-101-411-205</a>                       | CONTACTLESS RULER       |
| <a href="#">TP1-0225-101-411-205</a>                       | CONTACTLESS RULER       |
| <a href="#">P/N: 025332, Type: TLH-800</a>                 | Position Transducers    |
| <a href="#">RSM-2862-016-121-501</a>                       |                         |
| <a href="#">PN: 400012021 / Type: IPX 7901 107 120 103</a> | angle-sensor            |
| <a href="#">TH1-0200-102-423-101</a>                       | LINEAR TRANSDUCER       |