



# ENAPART



93 S Railroad Avenue Unit C  
Bergenfield NJ 07621 USA  
[www.enapart.com](http://www.enapart.com)  
[sales@enapart.com](mailto:sales@enapart.com)



Via del Canneto 35,  
Borgosatollo, Brescia - Italia  
[www.enapart.it](http://www.enapart.it)  
[vendite@enapart.it](mailto:vendite@enapart.it)



Barbaros Mah. Ihlamur Bul. Ağaoğlu  
My Newwork No:3/15 Ataşehir / İstanbul  
[www.enapart.net](http://www.enapart.net)  
[satis@enapart.net](mailto:satis@enapart.net)



PRIVADA 10 B SUR #3908 COL.  
ANZUREZ, C.P. 72530, PUEBLA, PUE  
[www.enapart.com.mx](http://www.enapart.com.mx)  
[sales@enapart.com.mx](mailto:sales@enapart.com.mx)



Friedrich-Ebert-Anlage 36, 60325  
Frankfurt am Main, Germany  
[www.enapart.de](http://www.enapart.de)  
[anfrage@enapart.de](mailto:anfrage@enapart.de)



4 boulevard Carnot, 95400  
villiers-le-bel, Paris, France  
[www.enapart.fr](http://www.enapart.fr)  
[sales@enapart.fr](mailto:sales@enapart.fr)



65049, ОДЕСА, ВУЛИЦЯ ІВАНА  
ФРАНКА, БУДИНОК 55, ПОВЕРХ 3  
[www.enapart.com.ua](http://www.enapart.com.ua)  
[sales@enapart.com.ua](mailto:sales@enapart.com.ua)



MUNICIPIUL BUCUREȘTI, SECTOR 3,  
B-DUL BASARABIA, NR.250, CORP P+5  
[www.enapart.ro](http://www.enapart.ro)  
[sales@enapart.ro](mailto:sales@enapart.ro)



〒584-0023 大阪府富田林市若松町  
東2丁目2番16号  
[www.enapart.co.jp](http://www.enapart.co.jp)  
[sales@enapart.co.jp](mailto:sales@enapart.co.jp)



PLAZA NUESTRA SEÑORA DE LAS  
NIEVES 12 ,LOCAL ,50012,ZARAGOZA  
[www.enapart.es](http://www.enapart.es)  
[ventas@enapart.es](mailto:ventas@enapart.es)



Складова база „Онгъл“, Склад А2, п.к.  
4006, гр. Пловдив, България  
[www.enapart.bg](http://www.enapart.bg)  
[sales@enapart.bg](mailto:sales@enapart.bg)



3 Austin Mews, High Street, Hemel  
Hempstead, HP1 3AF , United Kingdom  
[www.enapart.co.uk](http://www.enapart.co.uk)  
[sales@enapart.co.uk](mailto:sales@enapart.co.uk)

## Salze

Enapart always strives to provide the competitive prices and timings of supplies for its customers. We sell only original equipment and spare parts, although we are not always the official distributor or manufacturer's dealer. All displayed trademarks and part numbers are the property of their respective owners.

### rBaRAND' BPAOUCD

Toduct	AsicTntpto
<a href="#">H216 --430770, Nype6 HS7M0VH89V</a>	Oydraulic filter
<a href="#">---40/0U</a>	
<a href="#">--3-//M3</a>	3V9 399 K5B
<a href="#">--UV0/73 2 3V9 399 8KxB</a>	filter element
<a href="#">--U409-M</a>	HS 9VM00 P1 8KD 9V
<a href="#">3V9VM4</a>	Air Treather Rilter Element
<a href="#">ALE9M40</a>	starter
<a href="#">--V-44/0</a>	5SB RSBNEP EBEKE1N 5xMU07
<a href="#">5lxx0M43xxx00A0MV0</a>	
<a href="#">5DMV/F/</a>	5il filter
<a href="#">5D/33F C/M/.0M.VMG</a>	Rilter
<a href="#">--4V-M-7</a>	Rilter Element
<a href="#">-4M09M0- 2 HS 0M7V KSI</a>	air filter
<a href="#">--430MU9 2 H\$990V H8 Y8N/</a>	the element HS 990V has the filter fineness of / .mu.m
<a href="#">--U9V4/U</a>	Oydraulic filter
<a href="#">--430/-7</a>	5SB RSBNEP EBEKE1N5PFEP 1!KTEP6 --430/-7
<a href="#">---93M-/ 2 HS0M948KB</a>	ventilation filter
<a href="#">--4473V- 2 HS 907Vx0V3</a>	8uction filter
<a href="#">-0V7MV7/ 2HD/-xM7xMx8KD/</a>	
<a href="#">-4M9-3472 HS 990MV P1 H8 4</a>	
<a href="#">KAx--4V-MU0 2 R9M3Mx000-</a>	Rilterelement HS M0MV KSI 9V
<a href="#">Hi/9MM8KDY8NM0 C-4U0037UG</a>	OSFP5BSX RSBNPE
<a href="#">04MOBMU0-3000</a>	crankshaft bearing
<a href="#">04MHB9M0U/000</a>	connecting rod bearing
<a href="#">-0V7MV/- 2 HD/-xM/x9x8KD4</a>	Rilter Element
<a href="#">--V/4VV0</a>	connector terminal pin
<a href="#">9MOUXTM30F</a>	929 solenoid valve
<a href="#">--V-4473 2 HS 370V FP+ 40</a>	
<a href="#">H216 --43-UUU, Nype6 3V949MKSI/xer+ebinde</a>	KSI RSBNEP EBEKE1N
<a href="#">HSV00M0x0V-</a>	Peturn line filter
<a href="#">FKF0/7XM0T</a>	filter element
<a href="#">C-37/9V-- G XI M09 80/99</a>	fuel filter
<a href="#">--3M097V</a>	Bow pressure double switch filter
<a href="#">--430/39 2 Hi /90V H8 Y8N M0</a>	Riltration +roup
<a href="#">0/3HBMUUM7000</a>	



















Product	Description
<a href="#">H263-41300-033N4</a>	load break switch
<a href="#">M220-SE0734</a>	switch
<a href="#">M220-61312-003M1</a>	
<a href="#">LB225-31309-B13-FLYR</a>	
<a href="#">H216-41620-733M4</a>	
<a href="#">B240-41620-977M4</a>	
<a href="#">63A-S63-61050-B03-TDYR</a>	Power Selector Switch
<a href="#">M220-61640-003M1</a>	cam switch
<a href="#">M220-61762-003M1</a>	cam switch
<a href="#">M220-I-8721</a>	
<a href="#">M220-61037-003M1</a>	
<a href="#">AVA8-115</a>	Metal axle extension for central installation
<a href="#">M221-61192-033V1 (20A 600V)</a>	DIAGRAM
<a href="#">H 220 41300 281N4</a>	load break switch
<a href="#">H410-41300-033N2</a>	
<a href="#">P110-61049-003M1</a>	
<a href="#">P110-61050-003M1</a>	
<a href="#">M225-61213-013M1</a>	cam switch
<a href="#">S10-60129-B13-FHABG</a>	2 position switch
<a href="#">M220-61199-033M4</a>	ON/OFF Switch
<a href="#">S10-60129-B13-FHAB</a>	
<a href="#">H216-41400-700N1</a>	SWITCH BOX
<a href="#">16A-S16-73215-B03-TDGB</a>	LOCAL – OFF – REMOTE CONTROL SWITCH
<a href="#">M220-61037-013M1</a>	
<a href="#">M220-61361-013M1</a>	selector
<a href="#">M220-61049-013M1</a>	selector
<a href="#">M220-61331-013M1</a>	selector
<a href="#">M220-61313-013M1</a>	selector
<a href="#">M220-61762-013M1</a>	selector
<a href="#">16A S16-61313-B03-FHYR</a>	
<a href="#">H226-41300-206V4</a>	load break switch
<a href="#">PD120S-220(plastic wing)</a>	
<a href="#">PDM160M-220</a>	
<a href="#">SCRW16U</a>	Connector
<a href="#">M220-SE8000.00.L1</a>	switch
<a href="#">T225-61028-218N1</a>	
<a href="#">M220-61061-120M1</a>	
<a href="#">M220-61061-121M1</a>	
<a href="#">M220-61061-122M1</a>	
<a href="#">M220-61312-219M1</a>	Voltmeter switch
<a href="#">H220-41300-710M1</a>	switch
<a href="#">TCA2</a>	CLAMP COVER
<a href="#">P110-61037-003M1</a>	cam switch
<a href="#">M220-61325D-013M1</a>	wicket
<a href="#">S606-SE9614</a>	switch

Product	Description
<a href="#">H220-41300-033M4</a>	load break switch
<a href="#">PL16-09D 110V Green</a>	
<a href="#">PL16-09D 110V Red</a>	
<a href="#">PL16-09D 110V Yellow</a>	
<a href="#">PL16-09D 110V Blue</a>	
<a href="#">PL16-09D 110V White</a>	
<a href="#">M220-61369-003M1</a>	
<a href="#">H220-41300-700M1</a>	25A POWER DISCONNECTOR
<a href="#">P110-21509-R001D</a>	Special switch
<a href="#">60623094</a>	REFLECTOR
<a href="#">H216-SE0423</a>	20 A load break switch
<a href="#">MBH4-11A01</a>	Auxiliary contact module
<a href="#">MBH4-11A02</a>	Auxiliary contact module
<a href="#">M220-61079-003M1</a>	cam switch
<a href="#">H233-41311-033N4</a>	DISCONNECT SWITCH
<a href="#">B263-41400-534N4</a>	load break switch
<a href="#">M220-645429</a>	Special switch
<a href="#">H216-41311-033N4</a>	load break switch
<a href="#">6A-S6-61026-B13-TDYR</a>	
<a href="#">ZL-803 RAL7035</a>	
<a href="#">M220-E-3071</a>	Special switch
<a href="#">H220-SE2607</a>	
<a href="#">M220-I8910</a>	cam switch